Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

### Still image warning

- Avoid displaying still images (like jpeg picture files) or still image element (like TV programme logo, panorama or 4:3 image format, stock or news bar at screen bottom etc.) on the screen. Constant displaying of still picture can cause ghosting of LED screen, which will affect image quality. To reduce risk of this effect, please follow below
- · Avoid displaying the same TV channel for long periods.
- Always try do display any image on full screen, use TV set picture format menu for best possible match. Reduce brightness and contrast values to minimum required to achieve desired
- icture quality, exceeded values may speed up the burnout proces
- · Frequently use all TV features designed to reduce image retention and screen ournout, refer to proper user manual section for details

### Securing the Installation Space

- ensure proper ventilation. failing to do so may result in fire or a problem with the product due to an increase in internal temperature of the product
- When using a stand or wall-mount, use parts provided by Samsung
- with the product or an injury due to the product falling.
- The appearance may differ depending on the product. Be careful when you contact the TV because some parts can be somewhat

Installation with a stand.	Installation with a wall-mour
10 cm	10 cm

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre. 1800 266 8282 -800-10-7267864 [PLDT samsung.com/pl ww.samsung.com/sg www.samsung.com BELARUS www.samsung.com

Contact SAMSUNG WORLDWIDE



## Channel Menu

# **Channel List**

Seeing Channels

Select a channel in the All Channels, Added Channels

Favourites or Programmed screen by pressing the ▲ / ▼ buttons, and pressing the ENTER button. Then you can watch the selected channel



- 🦏 All Channels: Shows all currently available channels
- \_\_\_ Added Channels: Shows all added channels.
- **Favourites**: Shows all favourite channels.
- Using the remote control buttons with the Channel List
- Green (Zoom): Enlarges or shrinks a channel number.
- Yellow (Select): Selects multiple channel lists. Select desired
- channels and press the Yellow button to set all the selected channels at the same time. The  $\checkmark$  mark appears to the left of the selected channels.
- 🖅 (Tools): Displays the Channel List option menu. (The ons menus may differ depending on the situation.)

## Channel Status Display icons

		• •
Ī	Icons	Operations
ĺ	<b>✓</b>	A channel selected.
Ì	₩	A channel set as a favourites.
ĺ		A locked channel.
	- E	A reserved programme.

# □ Retuning Channels

You can change the desired area.

## **Auto Store**

(depending on the country)

Scans for a channel automatically and stores in the TV.

Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked, the PIN input window appears.

**Manual Store** Scans for a channel manually and stores in the TV.

[UEH5000-AR]BN68-04685A-02ENG.indd 1

If a channel is locked, the PIN input window appears. According to channel source, Manual Store may be

### Programme, Colour System, Sound System, Channel, Search. Store: If there is abnormal sound or no sound. reselect the sound standard required

## Channel mode

- P (Programme): When tuning is complete, the broadcasting stations in your area have been assigned to position numbers from P0 to P99. You can select a channel by entering the position number in this mode.
- C (aerial channel mode) / S (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or

## Channel List Option Menu TOOLS 7

Set each channel using the Channel List menu options (Add/ Delete, Add to Favourite/Delete from Favourite, Timer Viewing Lock/Unlock, Edit Channel Name, Sort, Select All/Deselect All. Auto Store). Option menu items may differ depending on the channel status.

Set each channel using the Channel List menu options. Option menu items may differ depending on the channel status.

■ Add / Delete: Delete or add a channel to display the channels

All deleted channels will be shown on the All Channels

A gray-Coloured channel indicates the channel has been

The **Add** menu only appears for deleted channels.

Delete a channel from the **Added Channels** or **Favourites** menu in the same manner.

### ■ Add to Favourite / Delete from Favourite TOOLS : Set channels you watch frequently as favourites

■ Timer Viewing: You can set a desired channel to be displayed automatically at the set time; even when you are watching another channel. Set the current time first to use this function.

■ Edit Channel Name: Assign your own channel name. ■ Sort: This operation allows you to change the programme numbers of the stored channels. This operation may be necessary after using the auto store.

■ Lock / Unlock: Lock a channel so that the channel cannot be selected and viewed.

This function is available only when the **Channel Lock** is set to On.

☼ The PIN input screen appears. Enter your 4-digit PIN, the default of which is "0-0-0-0". Change the PIN using the

Change PIN option. ■ Select All / Deselect All: You can select or deselect all channels

■ Auto Store: Scans for a channel automatically and stores in the

# Accessories


**Getting Started** 

 Remote Control & Batteries (AAA x 2) · Owner's Instructions Power Cord Warranty Card / Safety Guide (Not available in some locations)

Input Cables (Sold Separately) 

Coaxial (RF) Composite (AV)

# TV Controller (Panel Key)

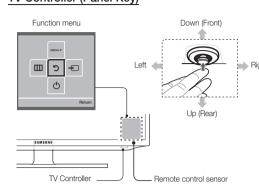

Turns the TV on by pressing the controller in Power on Adjusts the volume by moving the controller from Selects a channel by moving the controller up and down when the power is on. Selecting a channe ress the controller when the power is on, then the nction menu screen appears. If you press it again Using the function menu the function menu screen disappears Selects the **Menu(III)** by moving the controller in the function menu screen. The OSD(On Screen Display) of your TV's feature appears. Using the Menu (III) Selects the **Source**(—) by moving the controller in the function menu screen. The **Source List** screen Selects the MEDIA.P by moving the controller in the function menu screen. The Media Play main Selecting the Media Play creen appears.


Selects the Power Off (  $\bigcirc$  ) to turn the TV off by moving the controller in the function menu screen Exits the menu when pressing the controller more than 1 second

When selecting the function by moving the controller to the up/down/left/ right directions, be sure not to press the controller. If you press it first, you

Plug & Play When you turn the TV on for the first time, a sequence of on-screer prompts will assist in configuring basic settings. Press the POWER button. Plug & Play is available only when the Input source is set to

Connecting the power cord and antenna. (refer to

## Selecting a language

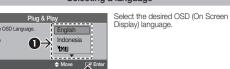

Selecting a Home Use mode ect the Home Use mode

Vhen pressing TV controller, the function menu screen appears. Select the **Menu(III**) and press it more than 5 seconds using the controller. The **Store Demo** mode is set. Cancel the **Store Demo** by electing Source(--) and pressing it more than 5 seconds

ss the ▶ / ENTER 🔫 button, Press ne ▲ or ▼ button, then press the ER 🗗 button to select the propriate area.

Auto Store The channel search will start automatically.

J

# Setting the Clock Set Press the ◀ or ▶ button to select Day Day Month Year 01 01 2012 Hour Minute

→ : Asia/Europ

Set these by pressing the ▲ / ▼ / ◀ / ▶ button, and press the ENTER outton to go next step

Viewing the HD Connection Guide

The connection method for the best HD screen quality is displayed.  $\downarrow$ 

Enjoy your TV.

Press the ENTER button

■ Added Channels: Shows all added channels

■ Favourite Ch.: Shows all favourite channels.

Channel Mode

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the

signal is weak or distorted, fine tune the channel manually. Fine tuned channels that have been saved are marked with an asterisk "\*" on the right-hand side of the channel number in the channel banner.

To reset the fine-tuning, select **Reset**.

# Picture Menu

Select your preferred picture type. ■ **Dvnamic**: Suitable for a bright room.

■ Standard: Suitable for a normal environment.

■ Movie: Suitable for watching movies in a dark room.

### Backlight / Contrast / Brightness / Sharpness / Colour / Tint (G/R)

Your television has several setting options for picture quality control.

(available in **Standard / Movie** mode)

Compared to previous models, new Samsung TVs have a more precise picture.

■ Colour Space (Auto / Native): Adjusts the range of colours ailable to create the image ■ White Balance: Adjust the colour temperature for a more natural

R-Offset / G-Offset / B-Offset: Adjust each colour's (red, green,

R-Gain / G-Gain / B-Gain: Adjust each colour's (red, green, blue) brightness.

Reset: Resets the White Balance to its default settings. ■ Gamma: Adjusts the primary colour intensity

■ Dynamic Contrast (Off / Low / Medium / High): Adjusts the ■ Black Tone (Off / Dark / Darker / Darkest): Select the black level

to adjust the screen depth. ■ Flesh Tone: Emphasize pink "Flesh Tone". ■ Motion Lighting (Off / On): Reduce power consumption by

brightness control adapted motion.

Only available in **Standard** mode.

Channels will be switched within the favourite or memorised channel 

Colour Tone (Cool / Standard / Warm1 / Warm2)

Warm1 or Warm2 will be deactivated when the picture mode is **Dynamic** 

screen sizes as well. However, we highly recommend you use 16:9 mode most of the time.

Adjusts the Position by using ▲, ▼ buttons.

Zoom: Magnifies the 16:9 wide pictures vertically to fit the screen

displayed on the left, right and centre of the screen may cause image retention (screen burn) which are not covered

Component (1080i / 1080p) mode: Adjusts the Position or

Size by using A. ▼. ◀. ▶ button • Depending on the input source, the picture size options may

• The available items may differ depending on the selected mode.

• Settings can be adjusted and stored for each external device nnected to an input on the TV

1 line will be cut at the top, bottom, left and right as in the overscan function. ■ Digital Noise Filter (Off / Low / Medium / High / Auto): If the

may appear on the screen.

When the signal is weak, try other options until the best picture is displayed.

screen to adjust the screen depth. Available only in **HDMI** mode (RGB signals). ■ Film Mode (Off / Auto): Sets the TV to automatically sense and

process film signals from all sources and adjust the picture for optimum quality

HDMI (480i / 1080i). ■ LED Motion Plus (Off / On): Removes drag from fast scenes with

## **Picture Reset**

Resets your current picture mode to its default settings. ■ Reset Picture Mode: Returns all picture values in the currently selected mode to the default settings.

## **Picture Options**

■ Size: Your cable box/satellite receiver may have its own set of

16:9: Sets the picture to 16:9 wide mode.

Wide Zoom: Magnifies the picture size more than 4:3.

4:3: Sets the picture to basic (4:3) mode.

Do not watch in 4:3 format for a long time. Traces of borders

Screen Fit: Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are

**№ NOTE** After selecting Screen Fit in HDMI (1080i / 1080p) or

• If you use the **Screen Fit** function with HDMI 720p input.

broadcast signal received by your TV is weak, you can activate the Digital Noise Filter feature to reduce any static and ghosting that

■ HDMI Black Level (Low / Normal): Selects the black level on the

Available in TV mode, AV, COMPONENT (480i / 1080i) and

Sound Reset a lot of movement to provide a clear picture. ■ Reset All: Reset all sound settings to the factory defaults.

### ray players / cable box / STB satellite receiver connected to the TV. 1. Press the SOURCE button

2. Select a desired external input source

Changing the Input Source

■ TV / AV / Component / HDMI1/DVI / HDMI2 You can only choose external devices that are connected to the TV. In the **Source List**, connected inputs will be highlighted.

Use to select TV or other external input sources such as DVD / Blu

## How to use Edit Name

Sound Menu

Mode Tools₁

Connections

AV Device (1)

Using a HDMI Cable (up to 1080p)

HDMI OUT

Using a HDMI (to DVI) Cable

Media Play

Blu-ray player / DVD / cable box / set top box

For better picture and audio quality, connect to a digital device using an HDMI cable.

Be sure to purchase a certified HDMI cable. Otherwise, the picture may not display or a connection error may occur.

TV Side Pane

AV Device (2)

Edit Name lets you associate a device name to an input source. To access Edit Name, press the TOOLS button in Source List. The ollowing selections appear under Edit Name

under **Edit Name**.

□ Setting the Time

■ Standard: Selects the normal sound mode. ■ Music: Emphasizes music over voices.

■ Movie: Provides the best sound for movies. ■ Clear Voice: Emphasizes voices over other sounds. ■ Amplify: Increase the intensity of high-frequency sound to allow a

# better listening experience for the hearing impaired.

Equalizer

(standard sound mode only) ■ Balance: Adjusts the balance between the right and left speaker.

■ 100Hz / 300Hz / 1KHz / 3KHz / 10KHz (Bandwidth Adjustment) Adjusts the level of specific bandwidth frequencies.

## SRS TruSurround HD TOOLS

(standard sound mode only)

This function provides a virtual 5.1 channel surround sound

experience through a pair of speakers using HRTF (Head Related

■ Reset: Resets the equalizer to its default settings.

## Transfer Function) technology.

**Auto Volume** Because each broadcasting station has its own signal conditions. the volume may fluctuate each time channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by

Selecting the Sound Mode TOOLS When you set to **Dual I-II**, the current sound mode is displayed on

ne screen.			
	Audio Type	Dual I-II	Default
	Mono	Mono	Automatic
A2 Stereo	Stereo	Stereo ↔ Mono	change
	Dual	Dual I ↔ Dual II	Dual I
	Mono	Mono	Automatic
NICAM	Stereo	Mono ↔ Stereo	change
Stereo		Mono ↔ Dual I	

 Dual II ∠ If the stereo signal is weak and an automatic switching, occurs, then switch to the mono-

Only activated in stereo sound signal. This function is available for all input sources

PC(D-Sub) and PC/DVI AUDIO IN input are not supported

. If an HDMI to DVI cable is connected to the HDMI IN 1(DVI) port, the audio does not work.

The picture may not display normally (if at all) or the audio may not work if an external device that uses an older version of HDMI mode is connected to the TV. If such a problem occurs, sak the manufacture of the external device about the HDMI version and, if out of occurs, sak the manufacture of the external device about the HDMI version and, if out of occurs, sak the manufacture of the external device about the HDMI version and, if our occurs, sak the manufacture of the external device about the HDMI version and, if our occurs are the HDMI cable may not be supported depending on the PC.

1 1

AV Device (3)

(up to 1080p)

 $\bullet \bullet \bullet \bullet \bullet$ 

■ VCR / DVD / Cable STB / Satellite STB / PVR STB / AV

input jacks to make your input source selection easier.

Receiver / Game / Camcorder / PC / DVI PC / DVI / TV / IPTV / Blu-ray / HD DVD / DMA: Name the device connected to the

When connecting a PC to the HDMI IN 1(DVI) port with HDMI

When connecting a PC to the HDMI IN 1(DVI) port with HDMI

When connecting an AV devices to the HDMI IN 1(DVI) port

with HDMI to DVI cable, you should set the TV to DVI mode

You can see detailed information about the selected external device.

Information only available for the current connected source.

cable, you should set the TV to PC mode under Edit Name.

to DVI cable, you should set the TV to DVI PC mode under Edit

The earphone jack supports only the 3 conductor tip-ring-sleeve (TRS) type.

The current time will appear every time you press the INFO ■ Clock Set: Set the Day, Month, Year, Hour, Minute.

### ■ Sleep Timer Tools, □ Automatically shuts off the TV after a preset period of time. (30.

60, 90, 120, 150 and 180 minutes). To cancel Sleep Timer, select Off.

## Timer 1 / Timer 2 / Timer 3

Three different on / off timer settings can be made. You must set the ■ On Time / Off Time: Set the hour, minute and Activate / Inactivate.

(To activate the timer with the setting you have chosen, set to Activate.)

■ Volume: Set the desired volume level.

■ Contents: When the On Time is activated, you can turn on a specific channel or play back contents such as photo or audio files. - TV/USB: Select TV or USB. (Make sure that an USB device is

connected to your TV.) Antenna: Displays the current antenna source.

- Channel: Select the desired channel.

Music/Photo: Select the folder containing MP3/JPEG files on the The maximum displayed number of files, including sub

### folders, in one folder of USB storage device is 2000. The media may not be playing smoothly when using the device lower than USB 2.0.

### Manual to set at your convenience. If you select Manual, you can set up the day you want to activate the timer.

programme.

Security The PIN input screen appears before the setup screen.

■ Repeat: Select Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun or

Enter your 4-digit PIN, the default of which is "0-0-0-0". Change the PIN using the Change PIN option. · Child Lock (Off / On): Lock channels in Channel List, to prevent unauthorized users, such as children, from watching unsuitable

Only available when the Input source is set to TV.

• Change PIN: Change your password required to set up the TV.

If you forget the PIN code, press the remote control buttons

# in the following sequence in Standby mode, which resets the PIN to "0-0-0-0": MUTE $\to$ 8 $\to$ 2 $\to$ 4 $\to$ POWER (on). Language

Set the menu language.

 $\ \ \, \ \ \,$  Select Language and press the ENTER  $\mbox{--}{\phantom{-}}$  button.

# SAMSUNG





Displays and selects the available video

Returns to the previous channe

Selects the HDMI mode directly

Use these buttons according to the

se these buttons in a specific feature.

### NOTE

Remote Control

This remote control has Braille points on the Power. Channel, and Volume buttons and can be used by visually impaired person

1 2 3

4 (5 6

7 8 9

O PRE-CH I

MEDIA.P MENU HDMI

A B C D

4 F II FF

P.MODE P.SIZE SRS

Turns the TV on and off.

Press to directly access to channels.

P.MODE: Selects the picture mode.

SRS: Turns the SRS TruSurround on and off

■ Energy Saving TOOLS (Off / Low / Medium / High / Picture

Off): This adjusts the brightness of the TV in order to reduce power consumption. If you select Picture Off, the screen is

volume button to turn on the screen.

brightness can be adjusted manually

surrounding light intensity.

**Auto Protection Time** 

shakes slightly.

Low, Medium and High.

The Melody does not play.

to remain on if it's not receiving a signal.

turned off, but the sound remains on. Press any button except

If you adjust the Backlight, the Eco Sensor will be set to

Min. Backlight: When Eco Sensor is On, the minimum screen

If Eco Sensor is On, the display brightness may change

■ No Signal Power Off (Off / 15 min / 30 min / 60 min): To avoid

■ Auto Power Off (Off / On): The TV will be automatically turned

■ Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10

to prevent the formation of ghost images on the screen.

■ Game Mode (Off/On): When connecting to a game console

gaming experience by selecting the game mode.

• Game Mode is not available in TV mode.

notice reduced picture quality

button has been pressed

• Precautions and limitations for game mode

such as PlavStation™ or Xbox™. vou can eniov a more realisti

- To disconnect the game console and connect another

external device, set Game Mode to Off in the setup

- If you display the TV menu in **Game Mode**, the screen

• After connecting the game console, set **Game Mode** to

■ Melody: Set so that a melody plays when the TV is turned off,

On to prevent poor picture quality. Unfortunately, you may

- When no sound is output from the TV because the MUTE

When no sound is output from the TV because the volume

has been reduced to minimum with the VOL - button.

- When the TV is turned off by **Sleep Timer** function.

hours): If the screen remains idle with a still image for a certain

period of time defined by the user, the screen saver is activated

Disabled when the PC is in power saving mode.

off when no user operation is received for 4 hours.

Display Modes (HDMI/DVI Input)

Optimal resolution is 1920 X 1080 @ 60 H;

IBM

**Eco Solution** 

P.SIZE: Selects the picture size.

Alternately select Teletext ON, Double, Mix or OF

 Use the remote control within 23 feet from TV. Bright light may affect the performance of the remote control.

Avoid using nearby special fluorescent light or neon signs. • The product colour and shape may vary depending on the

■ Picture Test: Use to check for picture problems. If the problem

■ Reset: Reset all settings to the factory defaults. The PIN input screen appears before the setup screen. Enter your 4-digit PIN. Change the PIN using the Change

# Software Upgrade can be performed by downloading the latest

firmware from "www.samsung.com" to a USB memory device. unnecessary energy consumption, set how long you want the TV **HD Connection Guide** 

## Support Menu

# **Self Diagnosis**

ntinues to occur, check the colour pattern ■ Eco Sensor (Off / On): To enhance your power savings; the ■ Sound Test: Use the built-in melody sound to check for sound picture settings will automatically adapt to the light in the room.

**PIN** option. (become slightly darker in most cases) depending on the Software Upgrade

## Refer to this information when connecting external devices to the

Contact Samsung View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and

Enjoy photos, music and/or movie files saved on a

USB Mass Storage Class (MSC) device.

### ☐ Connecting a USB Device

Media Play

- 2. Connect a USB device containing photo, music and/or movie files to the USB jack on the side of the TV.
- 3. When USB is connected to the TV, you can select Media Play.

### ☐ Using the Media Play Menu



- 1. Press the MENU button. Press the ▲ or ▼ button to select Application, then press the ENTER buttor
- 2. Press the ▲ or ▼ button to select Media Play (USB), then press the ENTER button.
- 3. Press the ◀ or ▶ button to select an icon (Videos, Music,
- Photos, Settings), then press the ENTER button. It might not work properly with unlicenced multimedia files.
- If you want to view detailed information of the file or connected device, press TOOLS button in the file list, and
- then select Detailed Information or Device Information. Need-to-Know List before using Media Play (USB)
- The file system supports FAT16, FAT32 and NTFS.
- Certain types of USB Digital camera and audio devices may not be compatible with this TV. Media Play only supports USB Mass Storage Class (MSC)
- devices MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives and Flash Card Readers. Devices should be connected directly to the TV's USB 1. Press the ◀ or ▶ button to select Videos, then press the
- port. USB (HDD) is supported. • Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is
- not responsible for any data file damage or data loss. • A USB device that requires high power (more than 1A) may not 3. Press the ENTER 🗗 button or 🕟 (Play) button.
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to
- display on the screen. • If a file is corrupted or the TV does not support the file type, the
- Not Supported File Format" message appears. If a USB extension cable is used, the USB device may not be

then click on Support, or contact the call centre listed on the back-cover of this manual.

recognized or the files on the device may not be read.

**Troubleshooting** 

The picture is distorted: macroblock error, small block, dots, pixelization

There is poor colour or brightness.

There is a dotted line on the edge of

The picture is black and white.

The picture is good but there is no

The speakers are making an

The TV turns off automatically.

There is no picture/video

[UEH5000-AR]BN68-04685A-02ENG.indd 2

No Picture, No Video

The TV will not turn or

Sound Quality

Colour is wrong or missing.

### Supported Subtitle Formats

### External

The TV cannot play MP3 files with DRM that have been

and management of digital content in an integrated and

comprehensive way, including protecting the rights and

contents, and managing billings and settlements.

• PTP device is not supported.

recognized or may malfunction.

Time, the Screensaver will run.

check the connection.

in the Videos.

lower than USB 2.0.

PC to permanently delete the file.

· Photos only supports sequential jpeg format.

appear and some folders may not be opened

in one folder of USB storage device is 2000.

ENTER button in the Media Play menu.

progress bar are not displayed.

but you cannot play the game itself.

playback.

If you have any questions about the TV, first refer to this list. If none of these troubleshooting tips apply, please visit "www.samsung.com,"

The TV image does not look as good as it did in the store.

• If you have an analogue cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality.

Cable/Satellite subscribers: Try HD stations from the channel line up.

Antenna connection: Try HD stations after performing Auto tuning.

• If the picture size is set to Screen Fit, change it to 16:9.

Set the output resolution of the cable box to 1080i or 720c

Set the Speaker Select option to TV Speaker in the sound menu.

• If you are using a HDMI cable, a separate audio cable is required.

• If your PC is connected to the TV, check your PC power settings.

'The remote control does not work" below

If your TV has a headphone jack, make sure there is nothing plugged into it.

Make sure the AC power cord is securely plugged in to the wall outlet and the TV

Make sure the AC power cord is plugged in securely to the wall outlet and the TV.

Check the cable connections. Make sure a video cable is not connected to an audio input.

· Change cable/satellite box resolution.

There is no sound or the sound is too Please check the volume the of external device connected to your TV.

Adjust the Cable/Set top box video output resolution to 1080i or 720p.

Many HD channels are up scaled from SD(Standard Definition) contents.

Low signal level or bad quality can cause picture distortion. This is not a TV issue.

Make sure you are watching the TV at the minimum recommended distance based on the size and definition of the signal.

• Mobile phones used close to the TV (cca up to 1m) may cause noise in picture on analogue and digital TV.

• Adjust the Picture options in the TV menu. (go to Picture mode / Colour / Brightness / Sharpness)

Adjust Energy Saving option in the TV menu. (go to MENU - Setup -Eco Solution - Energy Saving
 Try resetting the picture to view the default picture settings. (go to MENU - Picture - Picture Reset)

If you're using a component connection, make sure the component cables are connected to the correct jacks.
 Incorrect or loose connections may cause colour problems or a blank screen.

If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component input 1 on the TV.

If connected with a cable box, please try to reset the cable box. Reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes.

If you are using an external device, make sure the audio cables are connected to the correct audio input jacks on the TV.

Make sure the wall outlet is working.
 Try pressing the POWER button on the TV to make sure the problem is not the remote. If the TV turns on, refer to

 $\bullet$  When watching TV from an antenna or cable connection, the TV will turn off after 10  $\sim$  15 minutes if there is no

Set your external devices' (Cable/Set top Box, DVD, Blu-ray etc) video outputs to match the connections to the
TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV.
 Make sure your connected devices are powered on.

· Check cable connections (remove and reconnect all cables connected to the TV and external devices

• Be sure to select the TV's correct source by pressing the SOURCE button on the TV remote.

If you are using an external device, check the device's audio output option (ex. you may need to change your cable box's audio option to HDMI when you have a HDMI connected to your TV).

For antenna or cable connections, check the signal strength, Low signal level may cause sound distortion.

Compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action moving.

2. Press the / ▶ / ▲ / ▼ button to select the desired video in the

The selected file is displayed on the top with its playing

If video time information is unknown, playing time and the

During video playback, you can search using the ◀ and

You can use (◄) (REW) and (►) (FF) buttons during

In this mode, you can play movie clips contained in a game,

interests of content providers, preventing illegal copying of

If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be

 ${}^{\:\raisebox{3.5pt}{\text{\circle*{1.5}}}}$  If the TV has no input during the time set in  ${\bf Auto\ Protection}$ 

• The power-saving mode of some external hard disk drives may

be released automatically when your connect them to the TV.

• If you use a USB extension cable, the TV may not recognize the

USB device or may not be able to read the files on the device.

list of files on the device is corrupted, or a file in the list is not

Media Play, use the "Empty the Recycle Bin" function on the

The scene search and thumbnail functions are not supported

device is approximately over 4000, the files and folders may not

• The maximum displayed number of files, including sub folders,

The media may not be playing smoothly when using the device

· If the number of files and folders saved on a USB storage

played, connect the USB device to a PC, format the device, and

• If a USB device connected to the TV is not recognized, the

• If a file you deleted from the PC is still found when you run

downloaded from a for-pay site. Digital Rights Management

(DRM) is a technology that supports the creation, distribution,

_Xtomai	
Name	File extension
MPEG-4 timed text	.ttxt
SAMI	.smi
SubRip	.srt
SubViewer	.sub
Micro DVD	.sub or .txt
SubStation Alpha	.ssa
Advanced SubStation Alpha	.ass

### Interna

nternal		
Name	Container	Format
Xsub	AVI	Picture Format
SubStation Alpha	MKV	Text Format
Advanced SubStation Alpha	MKV	Text Format
SubRip	MKV	Text Format
MPEG-4 Timed text	MP4	Text Format

File Extension	Container	Video Codec	Resolution	Frame rate(fps)	Bit rate(Mbps)	Audio Code	
		DivX 3.11/4.x/5.1/6.0	1920x1080	6~30	30Mbps		
*.mp4	MP4	H264	1920x1080	6~30	30Mbps	MP3 / ADPC	
		AVC	1920x1080	6~30	30Mbps	/ AAC	
		MJPEG	640x480	6~30	10Mbps	]	
	"AVI MKV"	DivX 3.11/4.x/5.1/6.0	1920x1080	6~30	30Mbps		
*.avi *.mkv*		MPEG4 SP / ASP	1920x1080	6~30	30Mbps	MP3 / AC3 / LPCM / ADPC / DTS Core	
		H264	1920x1080	6~30	30Mbps		
		MJPEG	640x480	6~30	10Mbps		
	ASF	DivX 3.11 / 4.x /5.1 / 6.0	1920x1080	6~30	30Mbps	MP3 / AC3 / LPCM / ADPCM / WM	
*.asf *.wmv		MPEG4 SP / ASP	1920x1080	6~30	30Mbps		
.williv		H.264	1920x1080	6~30	30Mbps	WMA Pro	
*.ts *.trp	TS	MPEG2	1920x1080	6~30	30Mbps	AC3 / AAC MP3 / DD+	
*.tp *.m2ts	15	H. 264 BP / MP / HP	1920x1080	6~30	30Mbps	HE-AAC	
*.dat		MPEG1	1920x1080	24/25/30	30Mbps		
*.mpg *.mpeg	PS	MPEG2	1920x1080	24/25/30	30Mbps	AC3 / MPEG LPCM / AA	
*.vob		H. 264 BP / MP / HP	1920x1080	6~30	30Mbps		
* 0	3GPP	MPEG4 SP / ASP	1920x1080	6~30	30Mbps	MP3	
*.3gp	3GPP	H.264	1920x1080	6~30	30Mbps	I IMP3	
*.flv	flash formats	H.264	1920x1080	6~30	30Mbps	MP3	
*.swf	nasn iormats	Sorenson H.263	1920x1080	6~30	30Mbps	MP3	

# Other Restrictions

- NOTE Video content will not play, or not play correctly, if there is an error
- in the content or the containe Sound or video may not work if the contents have a standard bit rate/ frame rate above the compatible Frame/sec listed in the table above
- If the Index Table is in error, the Seek (Jump) function is not supported.
- The menu may take longer to appear if the video's bit rate exceeds 10Mbps
- Video content can not be played, if there are many contents in one

# Video Decoder

H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are not supported. MPEG4 SP. ASP:

- Below 1280 x 720: 60 frame ma: - Above 1280 x 720: 30 frame ma GMC is not support

Supports up to WMA7, 8, 9 STD, 9 PRO, 10 PRO

WMA 9 PRO and WMA 10 PRO support 5.1 channel. (LBR mode of WMA Pro is not

### Music



same USB device.

Please try Plug & Play (Initial setup) to add available channels to the channel list. Go to MENU - Setup - Plug &

Compression of video contents may cause picture distortion, especially on fast moving pictures such as sports

Black bars on the top and bottom will appear during movies that have aspect ratios different from your TV.

Programme the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual for the SAMSUNG TV code.

Check the supported resolution of the TV, and adjust the external device's output resolution accordingly. Refer to resolution settings in this manual.

Make sure the TV is placed on a flat surface. It is necessary to use magnetized screw driver if you cannot remove the screws from the TV.

Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.

from Store Demo mode to Home Use mode in the Plug & Play (Initial setup) procedure. Pres button to select TV mode, go to MENU → Setup → Plug & Play (Initial setup) → ENTER 🖃.

To prevent this, use felt pads on any surface of the TV that comes in direct contact with furniture.

- 10 -

Play (Initial setup) and wait for all available channels to be stored

A low signal can cause picture distortion. This is not a TV issu

The picture will not display in full screen. • HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.

Try pointing the remote directly at the TV from 5~6 feet away.

· This smell is normal and will dissipate over time

Remove the stand base from the TV and reassemble it

· Check the cable connections and reconnect them.

The Channel menu is only available when the TV source is selected

Your settings are lost after 30 minutes or

• If the TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Change the settings

• If the TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Change the settings

Set your PC's output resolution so it matches the resolutions supported by the TV.

If you are using a HDMI connection, check the audio output setting on your PC

Adjust the picture size options on your external device or TV to full screen

Clean the transmission window located on the top of the remote control

Replace the remote control batteries with the poles (+/-) in the right direction

Verify the Antenna is positioned correctly

Possible Solution

The TV is not receiving all channel

The picture is distorted: macroblock

A "Mode Not Supported" message

The video is OK but there is no audio.

The remote control does not work.

The cable/set top box remote control does not turn the TV on or off, or adjust

A "Mode Not Supported" message

There is a plastic smell from the TV.

There are difficulties assembling the

TV is tilted to the right or left side.

The **Channel** menu is grey out

every time the TV is turned off.

You have intermittent loss of audio or

closely at the edge of the frame of

A reaction may occur between the

and the top finish of some furniture.

rubber cushion pads on the base stand

error, small block, dots, pixelization

PC Connection

the volume.

- 1. Press the ◀ or ▶ button to select Music, then press the ENTER button in the Media Play menu
- 2. Press the  $\blacktriangleleft/\blacktriangleright/\blacktriangle/\blacktriangledown$  button to select the desired Music in the file
- 3. Press the ENTER → button or ► (Play) button.
- During music playback, you can search using the ◀ and ►
- (REW) and (FF) buttons do not function during play. Only displays the files with MP3 and PCM file extension. Other file extensions are not displayed, even if they are saved on the
- If the sound is abnormal when playing MP3 files, adjust the Equalizer in the Sound menu. (An over-modulated MP3 file may cause a sound problem.)



- 1. Press the ◀ or ▶ button to select Photos, then press the ENTER button in the Media Play menu.
- 2. Press the /▶/▲/▼ button to select the desired photo in the file
- 3. Press the ENTER → button or ► (Play) button.
- While a photo list is displayed, press the ▶ (Play) / ENTER •
- button on the remote control to start the slide show All files in the file list section will be displayed in the slide show
- During the slide show, files are displayed in order. • During the slide show, you can adjust the slide show speed using
- (◄) (REW) or (►►) (FF) button.
- You can move to other file using 

  or 

  button.
- Music files can be automatically played during the Slide Show if the Background Music is set to On.
- The Mode in Background Music cannot be changed until the

Image	Photo	Reso
IDEC	Base-line	15360 :
JPEG	Progressive	1024

### Playing Multiple Files

## ■ Playing selected video/music/photo files

- 1. Press the Yellow button in the file list to select the desired file
- 2. Repeat the above operation to select multiple files.
- NOTE
- To cancel a selection, press the Yellow button again.
- To deselect all selected files, press the TOOLS button and select Deselect All.
- 3. Press the TOOLS button, and then select Play Selected

## ■ Playing the video/music/photo file group

- While a file list is displayed, move to any file in desired group.

# Media Play - Additional Functions

■ Videos/Music/Photos Play Option menus When playing a file, press the TOOLS button.

Category	Operation	videos	IVIUSIC	Photos
Title	You can move the other file directly.	<b>✓</b>		
Repeat Mode	You can play movie and music files		<b>√</b>	

Title	You can move the other file directly.	<b>✓</b>		
Repeat Mode	You can play movie and music files repeatedly.	<b>✓</b>	~	
Picture Size	You can adjust the picture size to your preference.	<b>✓</b>		
Picture Mode	You can adjust the picture setting.	<b>✓</b>		<b>✓</b>
Sound Mode	You can adjust the sound setting.	<b>✓</b>	<b>✓</b>	<b>✓</b>
Subtile Setting	You can play the video with Subtitles. This function only works if the subtitles are the same file name as the video.	~		
Audio Language	You can change the audio language if the video has more than one language.	~		
Stop Slide Show /	You can start or stop a Slide Show.			~
Start Slide Show Slide Show Speed	You can select the slide show speed during the slide show.			~
Background Music	You can set and select background music when watching a Slide Show.			~
Zoom	You can zoom into images in full screen mode.			~
Rotate	You can rotate images in full screen mode.			<b>~</b>
Information	You can see detailed information about the played file.	<b>✓</b>	~	~

### Settings

- 11 -

### Using the Setup Menu

- DivX® Video On Demand : Shows the registration code authorized for the TV. If you connect to the DivX web site and register with 10-digit registration code, you can download the VOD activation file. Once you play it using Media Play, the registration
- For more information on DivX® VOD, visit http://vod.divx
- Information: Select to view information on the connected device

### Other Information

Wall Mount Kit Specifications (VESA)

may fall and result in severe personal injury.

Samsung Electronics is not responsible for any damage to the

The wall mount kit is not supplied, but sold separately

Install your wall mount on a solid wall perpendicular to the floor.

When attaching to other building materials, please contact your

nearest dealer. If you install the TV on a ceiling or slanted wall, it

Standard dimensions for wall mount kits are shown in the table

. When purchasing our wall mount kit, a detailed installation

may cause damage to the inside of the TV set.

depending on the wall mount specifications.

manual and all parts necessary for assembly are provided.

• For wall mounts that do not comply with the VESA standard

screw specifications, the length of the screws may differ

Do not fasten the screws too firmly. This may damage the

 Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the

consumer fails to follow the product installation instructions.

200 X 200

400 X 400

VESA screw hole specs | Standard | Quantity |

M8

Do not install your Wall Mount Kit

while your TV is turned on. It may

result in personal injury due to

electric shock

Samsung is not liable for these kinds of accidents

• Do not mount the TV at more than a 15 degree tilt.

Always have two people mount the TV on a wall

Model

UA32EH5000

UA32EH5030

JA32FH508

UA40EH5000

UA40FH5030

UA40EH5080

UA42FH5000

UA46EH5000

product or cause the product to fall, leading to personal injury.

• Do not use screws that do not comply with the VESA standard

## Installing the Wall Mount Kit

on your own.

NOTE

screw specifications

may cause the TV to fall. In particular, ensure that your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, resulting in serious The wall mount kit (sold separately) allows you to mount the TV on the wall. For detailed information on installing the wall mount, see injuries or death. Follow all safety precautions provided ne instructions provided with the wall mount. Contact a technicial for assistance when installing the wall mount bracket.

Securing the TV to the Wall

### on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows.

To prevent the TV from falling product or injury to yourself or others if you elect to install the TV Since the necessary clamps, screws, and string are not supplied, please purchase these additionally.

> 1. Put the screws into the clamps and firmly fasten them onto the wall. Confirm that the screws have been firmly installed onto the

Caution: Pulling, pushing, or climbing onto the TV

You may need additional material such as an anchor depending on the type of wall.

Since the necessary clamps, screws, and string are not supplied, please purchase these additionally

2. Remove the screws from the back Centre of the TV, put the screws into the clamps, and then fasten the screws onto the TV

Screws may not be supplied with the product. In this case, please purchase the screws of the following specifications.

3. Connect the clamps fixed onto the TV and the clamps fixed onto

### • Do not use screws longer than the standard dimension, as they the wall with a strong cable and then tie the string tightly.

- backwards. • It is safe to connect the string so that the clamps fixed on
- the wall are equal to or lower than the clamps fixed on the
- 4. Verify all connections are properly secured. Periodically check connections for any sign of fatigue for failure. If you have any doubt about the security of your connections, contact a

### **Kensington Lock**

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place.

slot is beside the "园" icon. The position and colour may differ depending on the model.

To lock the product, follow these steps:

- 2. Slide the end of the cable with the lock attached through the
- looped end of the Kensington lock cable.
- These are general instructions. For exact instructions, see the
- The locking device has to be purchased separately.

# depending on the TV model.



## Storage and Maintenance

§ If you remove the attached sticker on the TV screen, clean the residues and then watch TV.

TheaterSound, SRS and the @ symbol are trademarks of SRS Labs, Inc eaterSound technology is incorporated under

DIVX.

X Certified to play DivX video up to HD 1080p, including premium content. ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi

files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX 7,460,668; 7,515,710; 7,519,274

Manufactured under Licence from Dolby aboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

and are used under license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other

Open Source Licence Notice Open Source used in this product can be found on the following webpage

Clean the product with a soft cloth dampened with in a small amount of water

Do not use a flammable liquid (e.g. benzene, thinners) or a cleaning agent.

pensource.samsung.com) Open Source Licence Notice is written o send inquiries and requests for questions regarding open sources.

■ This product uses some software programs which are distributed under

CU License - ICU 1.8.1 and later COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1995-2008 International Business Machines Corporation and others All rights reserved. mission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software") to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this

permission notice appear in all copies of the Software and that both the

above copyright notice(s) and this permission notice appear in supporting

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO VENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECTOR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER BESULTING FROM LOSS OF LISE, DATA OR PROFITS, WHETHER IN N ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS

except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyrig

ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR

All trademarks and registered trademarks mentioned herein are the roperty of their respective owners.

PERFORMANCE OF THIS SOFTWARE.

Specifications			
Display Resolution	1920	x 1080	
Environmental Considerations Operating Temperature Operating Humidity Storage Temperature Storage Humidity	10% to 80%, r -20°C to 45°C	(50°F to 104°F) ion-condensing (-4°F to 113°F) on-condensing	
Sound Output	10W x 2		
Model Name	UA32EH5000 / UA32EH5030 / UA32EH5080	UA40EH5000 / UA40EH5030 / UA40EH5080	
Screen Size	81 cm	102 cm	
Dimensions (W X H X D) Body With stand	738.3 × 444.9 × 93.2 (mm) 738.3 × 498.2 × 191.7 (mm)	927.6 X 551.0 X 93.0 (mm) 927.6 X 606.5 X 227.6 (mm)	
Weight Without Stand With Stand	5.9 kg 6.6 kg	9.0 kg 11.0 kg	
Model Name	UA42EH5000	UA46EH5000	
Screen Size	107 cm	117 cm	
Dimensions (W X H X D) Body With stand	975.0 X 576.9 X 93.0 (mm) 975.0 X 633.7 X 227.6 (mm)	1059.8 X 625.6 X 94.3 (mm) 1059.8 X 680.7 X 227.6 (mm)	
Weight	0.51%	40.51.5	

Design and specifications are subject to change without prior notice. For information about power supply, and more about power consumption, refer to the label attached to the product.

# For India Only



This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolle waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

or more information on safe disposal and recycling visit our website www.samsung.com/in or contact our Helpline numbers - 18002668282, 180030008282.


🦠 This TFT LED panel uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

You see small particles when you look • This is part of the product's design and is not a defect.


There are recurrent picture/sound issues. • Check and change the signal/source.

Solution Support S

# Assembling the Cable manage

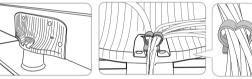



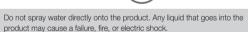

licence from SRS Labs, Inc.

# Licence



SRS TheaterSound™ provides the most immersive speakers, while maintaining steady volume and

Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx. com for more information and software tools to convert your Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate

the DivX VOD section in your device setup menu Go to vod.divx.com for more information on hov to complete your registration. Covered by one or more of the following U.S. patents: 7,295,673; DivX®. DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worker by DTS, the Symbol, & DTS and the Symbol togethe U.S. and worldwide patents issued & pending. are registered trademarks & DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

Install the TV near to the wall so that it does not fall

• Untie the string before moving the TV.

Refer to the manual provided with the Kensington Lock for additional information on proper use Second Please find a "R" icon on the rear of the TV. The Kensington

1. Wrap the Kensington lock cable around a large, stationary object such as desk or chair.

3. Insert the locking device into the Kensington slot on the product.

4. Lock the lock.

User manual supplied with the locking device.

The location of the Kensington slot may be different

- 12 -

14.5 ka