

SAMSUNG

USER MANUAL

Crystal UHD

8 SERIES

Thank you for purchasing this Samsung product.


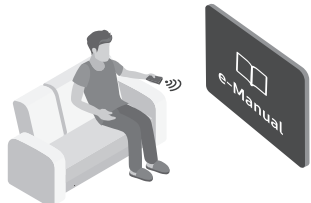


To receive more complete service, please register your product at www.samsung.com

Model _____ Serial No. _____

Before Reading This User Manual

This TV comes with this user manual and an embedded e-Manual.





Before reading this user manual, review the following:

	<p>User Manual</p>	<p>Read this provided user manual to see information about product safety, installation, accessories, initial configuration, and product specifications.</p>
	<p>e-Manual</p>	<p>For more information about this TV, read the e-Manual embedded in the product.</p> <ul style="list-style-type: none"> To open the e-Manual, <ul style="list-style-type: none">  >  Settings > Support > Open e-Manual

On the website (www.samsung.com), you can download the manuals and see its contents on your PC or mobile device.

Learning the e-Manual's assistance functions

- Some menu screens cannot be accessed from the e-Manual.

	<p>Search</p>	<p>Select an item from the search results to load the corresponding page.</p>
	<p>Index</p>	<p>Select a keyword to navigate to the relevant page.</p> <ul style="list-style-type: none"> This function is only supported by the English e-Manual.
	<p>Site Map</p>	<p>It displays the lists for each item in e-Manual.</p>
	<p>Recently Viewed Topics</p>	<p>Select a topic from the list of recently viewed topics.</p>

Learning the functions of the buttons that appear on e-Manual topic pages

	<p>Try Now</p>	<p>Allows you to access the corresponding menu item and try out the feature right away.</p>
	<p>Link</p>	<p>Access an underlined topic referred to on an e-Manual page immediately.</p>

Warning! Important Safety Instructions

Please read the Safety Instructions before using your TV.

Refer to the table below for an explanation of symbols which may be on your Samsung product.

CAUTION			Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a mains lead, the product MUST have a reliable connection to protective earth (ground).
RISK OF ELECTRIC SHOCK. DO NOT OPEN.			
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.			AC voltage: Rated voltage marked with this symbol is AC voltage.
	This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.		DC voltage: Rated voltage marked with this symbol is DC voltage.
	This symbol indicates that this product has included important literature concerning operation and maintenance.		Caution. Consult instructions for use: This symbol instructs the user to consult the user manual for further safety related information.

- The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of this apparatus and to protect it from overheating, these slots and openings must never be blocked or covered.
 - Do not place this apparatus in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.
 - Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
 - Do not place vessels (vases etc.) containing water on this apparatus, as this can result in a fire or electric shock.
- Do not expose this apparatus to rain or place it near water (near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.). If this apparatus accidentally gets wet, unplug it and contact an authorised dealer immediately.
- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.
- Do not overload wall outlets, extension cords, or adaptors beyond their capacity, since this can result in fire or electric shock.
- Power-supply cords should be placed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, at wall outlets, and at the point where they exit from the appliance.

- To protect this apparatus from a lightning storm, or when left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power line surges.
- Before connecting the AC power cord to the DC adaptor outlet, make sure that the voltage designation of the DC adaptor corresponds to the local electrical supply.
- Never insert anything metallic into the open parts of this apparatus. This may cause a danger of electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Be sure to plug in the power cord until it is firmly seated. When unplugging the power cord from a wall outlet, always pull on the power cord's plug. Never unplug it by pulling on the power cord. Do not touch the power cord with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorised dealer or Samsung service centre.
- Be sure to pull the power plug out of the outlet if the TV is to remain unused or if you are going to leave the house for an extended period of time (especially when children, elderly, or disabled people will be left alone in the house).
 - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat or by causing the insulation to deteriorate.
- Be sure to contact an authorised Samsung service centre for information if you intend to install your TV in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failure to do so may lead to serious damage to your TV.
- Use only a properly grounded plug and wall outlet.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off this apparatus completely, disconnect it from the wall outlet. To ensure you can unplug this apparatus quickly if necessary, make sure that the wall outlet and power plug are readily accessible.
- Store the accessories (batteries, etc.) in a location safely out of the reach of children.
- Do not drop or strike the product. If the product is damaged, disconnect the power cord and contact a Samsung service centre.
- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product with a soft, dry cloth. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, aerial fresheners, lubricants, or detergents. These chemicals can damage the appearance of the TV or erase the printing on the product.
- Do not expose this apparatus to dripping or splashing.
- Do not dispose of batteries in a fire.
- Do not short-circuit, disassemble, or overheat the batteries.
- **CAUTION:** There is danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or equivalent type.

* Figures and illustrations in this User Manual are provided for reference only and may differ from the actual product appearance. Product design and specifications may change without notice.

WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.




Contents

	Before Reading This User Manual	2
	Warning! Important Safety Instructions	3
01	What's in the Box?	
02	TV Installation	
	Mounting the TV on a wall	7
	Providing proper ventilation for your TV	8
	Safety Precaution: Securing the TV to the wall to prevent falling	9
03	The Samsung Smart Remote	
	About the Buttons on the Samsung Smart Remote	10
	Pairing the TV to the Samsung Smart Remote	11
	Installing batteries into the Samsung Smart Remote	11
04	Running the Initial Setup	
	Connecting the antenna adapter	12
	Using the TV Controller	13
05	Connecting to a Network	
	Network Connection - Wireless	14
	Network Connection - Wired	14
06	Troubleshooting and Maintenance	
	Troubleshooting	15
	What is Remote Support?	17
	Eco Sensor and screen brightness	17
	Caring for the TV	18
07	Specifications and Other Information	
	Specifications	19
	Environmental Considerations	20
	Decreasing power consumption	21
	Licences	21

01 What's in the Box?

Make sure the following items are included with your TV. If any items are missing, contact your dealer.

 - Samsung Smart Remote & Batteries (AA x 2)
- User Manual
- Warranty Card / Regulatory Guide (Not available in some locations)
- TV Power Cable

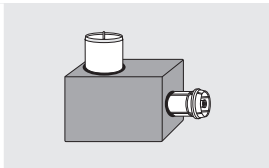

Antenna adapter

- The items' colours and shapes may vary depending on the models.
- Cables not included can be purchased separately.
- Check for any accessories hidden behind or in the packing materials when opening the box.

⚠ Note: Insert the power cord securely to prevent loosening from the TV.

 
An administration fee may be charged in the following situations:

- (a) An engineer is called out at your request, but it is found that the product has no defect (i.e., where the user manual has not been read).
- (b) You bring the unit to the Samsung service centre, but it is found that the product has no defect (i.e., where the user manual has not been read).

You will be informed of the administration fee amount before a technician visits.



Warning: Screens can be damaged from direct pressure when handled incorrectly. We recommend lifting the TV at the edges, as shown. For more information about handling, refer to the Quick Setup Guide came with this product.

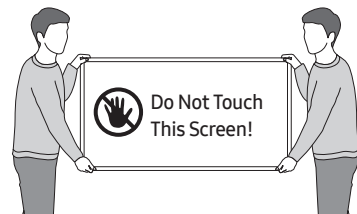


02 TV Installation

Mounting the TV on a wall




If you mount this TV on a wall, follow the instructions exactly as set out by the manufacturer. Unless it is correctly mounted, the TV may slide or fall and cause serious injury to a child or adult and serious damage to the TV.

 - Refer to the installation manual included with the Samsung wall mount kit.
- You can mount the TV on the wall using a wall mount kit (sold separately).

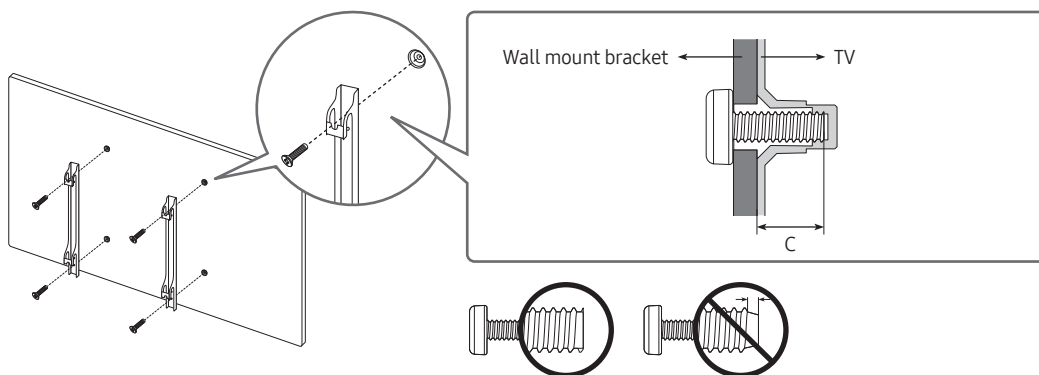

- Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you choose to install the wall mount on your own.
- You can install your wall mount on a solid wall perpendicular to the floor. Before attaching the wall mount to surfaces other than plaster board, contact your nearest dealer for additional information. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.
- Standard dimensions for wall mount kits are shown in the table on the next page.
- If you are installing a third-party wall mount, note that the length of the screws you can use to attach the TV to the wall mount is shown in column C in the table on the next page.
- When installing a wall mount kit, we recommend you fasten all four VESA screws.
- If you want to install a wall mount kit that attaches to the wall using two top screws only, be sure to use a Samsung wall mount kit that supports this type of installation. (You may not be able to purchase this type of wall mount kit, depending on the geographical region.)

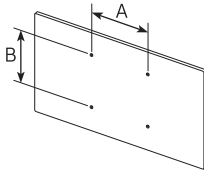TV size in inches	VESA screw hole specs (A * B) in millimetres	C (mm)	Standard Screw	Quantity	
43-55	200 x 200	20-22 *39-41	M8	4	
65	400 x 300				

*: These specifications are supported by TU8500.



 
Do not install your wall mount kit while your TV is turned on. This may result in personal injury from electric shock.

- Do not use screws that are longer than the standard dimension or do not comply with the VESA standard screw specifications. Screws that are too long may cause damage to the inside of the TV set.
- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.
- Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or when the consumer fails to follow the product installation instructions.
- Do not mount the TV at more than a 15 degree tilt.
- Always have two people mount the TV onto a wall.

Providing proper ventilation for your TV

When you install your TV, maintain a distance of at least 10 cm between the TV and other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.

- When you install your TV with a stand or a wall mount, we strongly recommend you use parts provided by Samsung Electronics only. Using parts provided by another manufacturer may cause difficulties with the product or result in injury caused by the product falling.

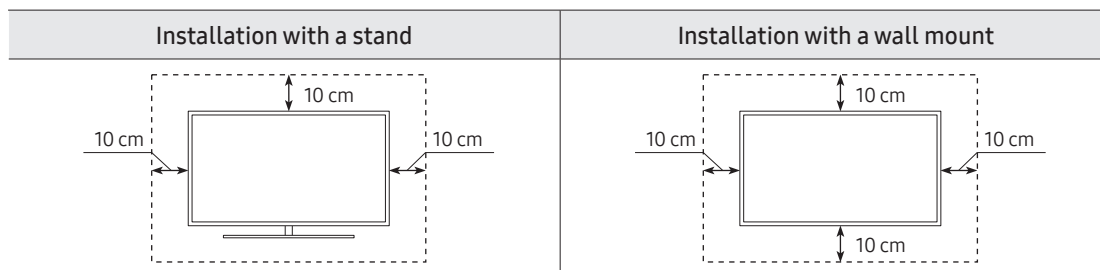

Other Cautions

- The actual appearance of the TV may differ from the images in this manual, depending on the model.
- Be careful when you touch the TV. Some parts can be warm or hot.

Safety Precaution: Securing the TV to the wall to prevent falling



Caution: Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, ensure your children do not hang on or destabilise the TV. This action may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided in the Safety Flyer included with your TV. For added stability and safety, you can purchase and install the anti-fall device as described below.



WARNING: Never place a television set in an unstable location. The television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

 
 
- Always use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- Always use furniture that can safely support the television set.
- Always ensure the television set is not overhanging the edge of the supporting furniture.
- Always educate children about the dangers of climbing on furniture to reach the television set or its controls.
- Always route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- Never place a television set in an unstable location.
- Never place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Never place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Never place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

- When you have to relocate or lift the TV for replacement or cleaning, be sure not to pull out the stand.

Preventing the TV from falling

1. Using the appropriate screws, firmly fasten a set of brackets to the wall. Confirm that the screws are firmly attached to the wall.
 - You may need additional material such as wall anchors depending on the type of wall.
2. Using the appropriately sized screws, firmly fasten a set of brackets to the TV.
 - For the screw specifications, refer to the standard screw part in the table under "Mounting the TV on a wall".
3. Connect the brackets fixed to the TV and the brackets fixed to the wall with a durable, heavy-duty string, and then tie the string tightly.
 - Install the TV near the wall so that it does not fall backwards.
 - Connect the string so that the brackets fixed to the wall are at the same height as or lower than the brackets fixed to the TV.

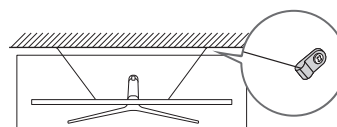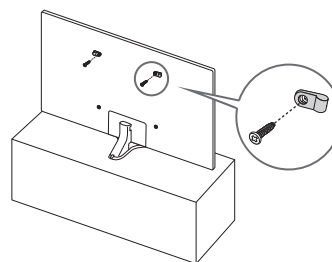


- The product colour and shape may vary depending on the model.


03 The Samsung Smart Remote



 About the Buttons on the Samsung Smart Remote

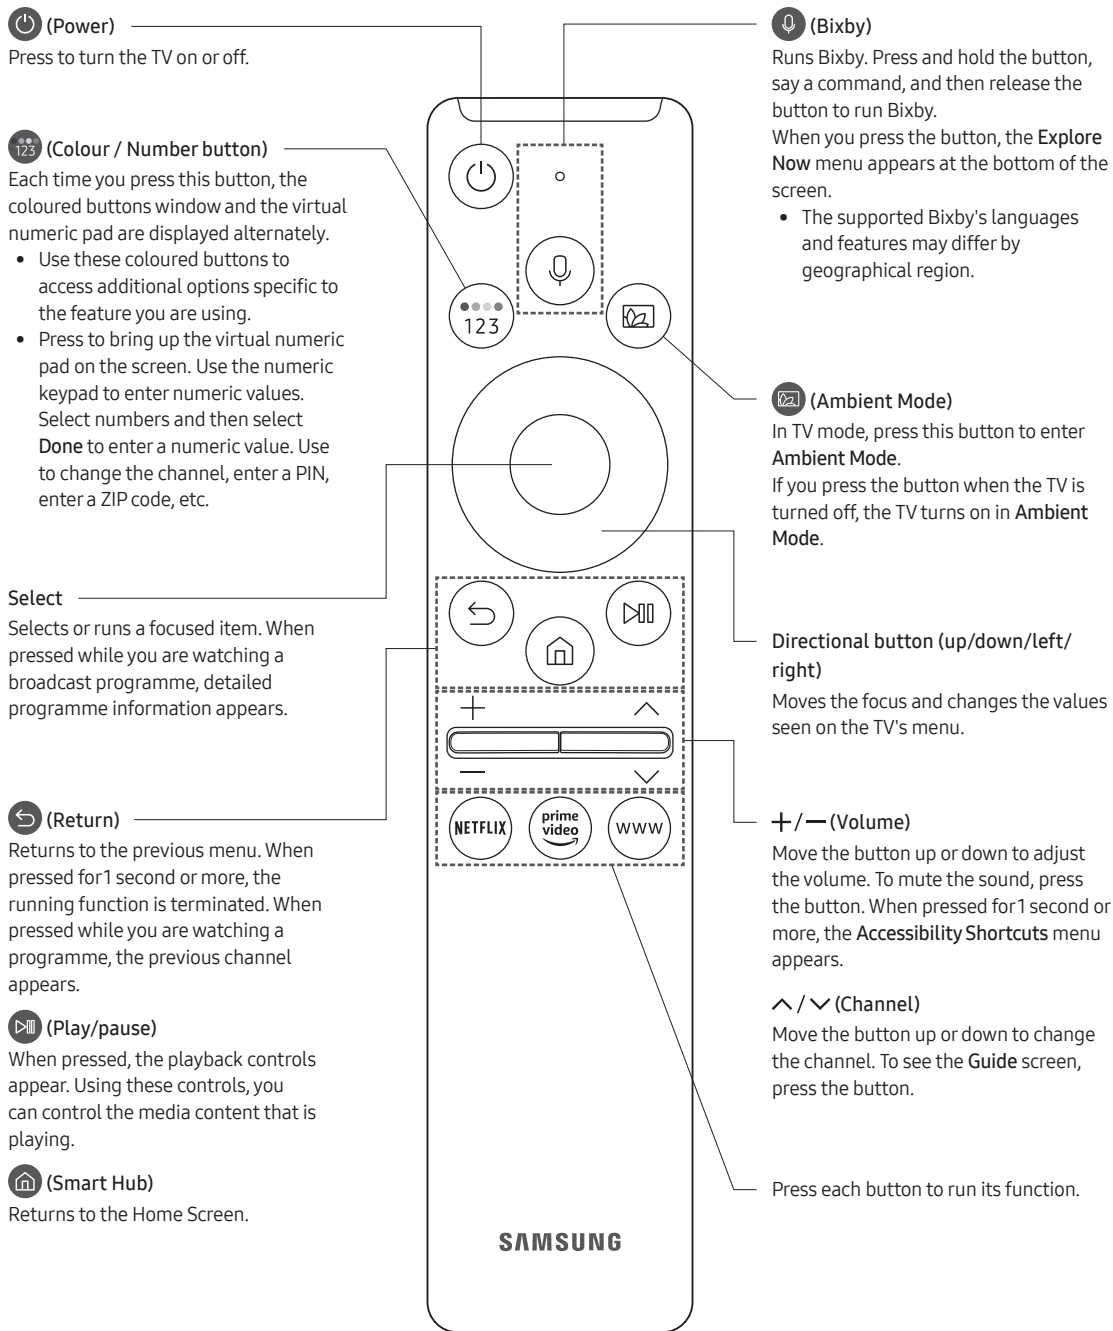- The images, buttons, and functions of the Samsung Smart Remote may differ depending on the model.
- The Universal Remote function operates normally only when you use the Samsung Smart Remote that comes with the TV.

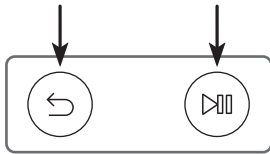 


Pairing the TV to the Samsung Smart Remote



When you turn on the TV for the first time, the Samsung Smart Remote pairs to the TV automatically. If the Samsung Smart Remote does not pair to the TV automatically, point it at the remote control sensor of the TV, and then press and hold the buttons labelled  and  as shown in the figure on the left simultaneously for 3 seconds or more.

- The Samsung Smart Remote can only be paired to one TV at a time.

 Installing batteries into the Samsung Smart Remote

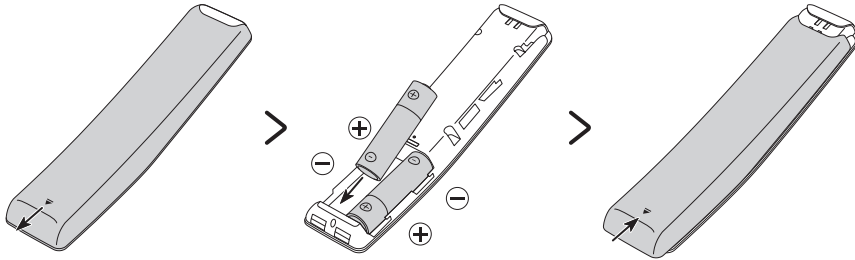

To install the batteries, push the rear cover open in the direction of the arrow at the bottom of the illustration, and then insert the batteries as shown in the figure. Make sure that the positive and negative ends are facing in the correct direction. Close the rear cover as shown.

- Alkaline batteries are recommended for longer battery life.

04 Running the Initial Setup

When you turn on your TV for the first time, it immediately starts the Initial Setup. The Initial Setup allows you to configure the basic settings for the TV to operate, such as broadcast reception, channel search, and network connection, at one time.

- Before starting the Initial Setup, be sure to connect external devices first.
- To use the TV's smart features, the TV must be connected to the Internet.
- To perform Initial Setup using the SmartThings app, you must connect your mobile device via Wi-Fi.
- If the pop-up for setup does not appear automatically on the SmartThings app on your mobile device, continue setup manually after adding the TV using **Add Device** on the dashboard of the SmartThings app.
- The SmartThings app is available for mobile devices running Android 6.0 or higher or iOS 10 or higher.
- Noise may occur temporarily when the TV communicates with mobile devices.

You can also start the Initial Setup using the TV's menu (🏠 > ⚙️ **Settings** > **General** > **Reset**).

 
Follow the instructions displayed on the Initial Setup screen and configure the TV's basic settings to suit your viewing environment.

Connecting the antenna adapter

Connect the provided antenna adapter to an antenna terminal on the wall, and then connect the antenna cable, which is connected to ANT IN on the TV, to the antenna adapter.

The connected antenna adapter prevents overload that may occur due to potential difference between the antenna terminal on the wall and the antenna cable, consequently being able to prevent product damage or fire.

- Be sure to use the provided antenna adapter.
- The method for connecting the antenna adapter and the markings on the antenna terminals may differ depending on the model and geographical region.
- If you use the antenna adapter where antenna signals are weak, the screen may become blurry.

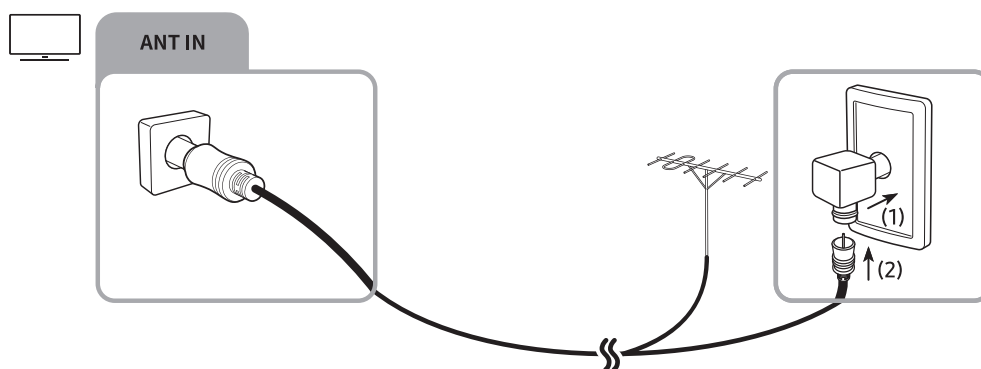


- The image on your TV may differ from the image above depending on the model and geographical area.

Using the TV Controller

You can turn on the TV with the TV Controller button at the bottom of the TV, and then use the Control menu. The Control menu appears when the TV Controller button is pressed while the TV is On. For more information about its usage, refer to the figure below.

 - The screen may dim if the protective film on the SAMSUNG logo or the bottom of the TV is not detached. Please remove the protective film.

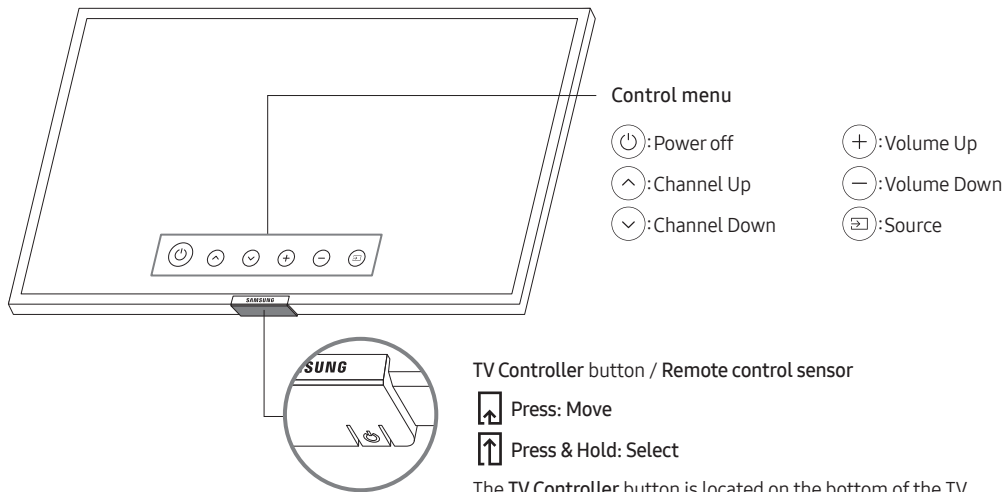


05 Connecting to a Network


Connecting the TV to a network gives you access to online services, such as Smart Hub, as well as software updates.

Network Connection - Wireless

 Connect the TV to the Internet using a wireless access point or modem.

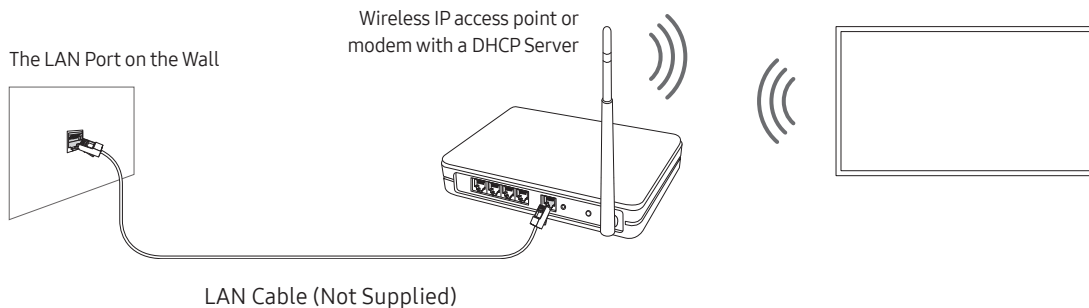

Network Connection - Wired

 

Connect your TV to the network using a LAN cable.

- The TV will not be able to connect to the Internet if your network speed is below 10 Mbps.
- Use Cat7 (*STP Type) cable for the connection.
* Shielded Twisted Pair

06 Troubleshooting and Maintenance

Troubleshooting

If the TV seems to have a problem, first review this list of possible problems and solutions. Alternatively, review the Troubleshooting or FAQ Section in the e-Manual. If none of these troubleshooting tips apply, please visit “www.samsung.com” and click on Support, or contact the Samsung service centre listed on the back cover of this manual.

- This TFT LED panel is made up of sub pixels which require sophisticated technology to produce. There may be, however, a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.
- To keep your TV in optimum condition, upgrade to the latest software. Use the **Update Now** or **Auto update** functions on the TV's menu (🏠 > ⚙️ **Settings** > **Support** > **Software Update** > **Update Now** or **Auto update**).

The TV won't turn on.

- Make sure that the AC power cable is securely plugged in to the TV and the wall outlet.
- Make sure that the wall outlet is working and the remote control sensor at the bottom of the TV is lit and glowing a solid red.
- Try pressing the **TV Controller** button at the bottom of the TV to make sure that the problem is not with the remote control. If the TV turns on, refer to “The remote control does not work”.

There is no picture/video/sound, or a distorted picture/video/sound from an external device, or “Weak or No Signal” is displayed on the TV, or you cannot find a channel.

- Make sure the connection to the device is correct and that all cables are fully inserted.
- Remove and reconnect all cables connected to the TV and the external devices. Try new cables if possible.
- Confirm that the correct input source has been selected (🏠 > ➡️ **Source**).
- Perform a TV self diagnosis to determine if the problem is caused by the TV or the device (🏠 > ⚙️ **Settings** > **Support** > **Device Care** > **Self Diagnosis** > **Picture Test** or **Sound Test**).
- If the test results are normal, reboot the connected devices by unplugging each device's power cable and then plugging it in again. If the issue persists, refer to the connection guide in the user manual of the connected device.
- If you are not using a cable box or satellite box, and your TV is receiving TV signals from an antenna or a cable wall connector, run **Auto Tuning** to search for channels (🏠 > ⚙️ **Settings** > **Broadcasting** > **(Auto Tuning Settings)** > **Auto Tuning**).
 - The **Auto Tuning Settings** may not appear depending on the model or geographical area.
 - If you are using a cable box or satellite box, please refer to the cable box or satellite box manual.

The remote control does not work.

- Check if the power indicator at the bottom of the TV blinks when you press the remote's Power button. If it does not, replace the remote control's batteries.
- Make sure that the batteries are installed with their poles (+/-) in the correct direction.
- Try pointing the remote directly at the TV from 1.5-1.8 m away.
- If your TV came with a Samsung Smart Remote (Bluetooth Remote), make sure to pair the remote to the TV.

The cable box or satellite box remote control doesn't turn the TV on or off or adjust the volume.

 
- Programme the cable box or satellite box remote control to operate the TV. Refer to the cable box or satellite box user manual for the SAMSUNG TV code.

The TV settings are lost after 5 minutes.

- The TV is in the Retail Mode. Change the Usage Mode in the General Menu to Home Mode (🏠 > ⚙️ Settings > General > System Manager > Usage Mode > Home Mode).

Intermittent Wi-Fi

- Make sure the TV has a network connection (🏠 > ⚙️ Settings > General > Network > Network Status).
- Make sure the Wi-Fi password is entered correctly.
- Check the distance between the TV and the modem or access point. The distance should not exceed 15.2 m.
- Reduce interference by not using or turning off wireless devices. Also, verify that there are no obstacles between the TV and the modem or access point. (The Wi-Fi strength can be decreased by appliances, cordless phones, stone walls/fireplaces, etc.)

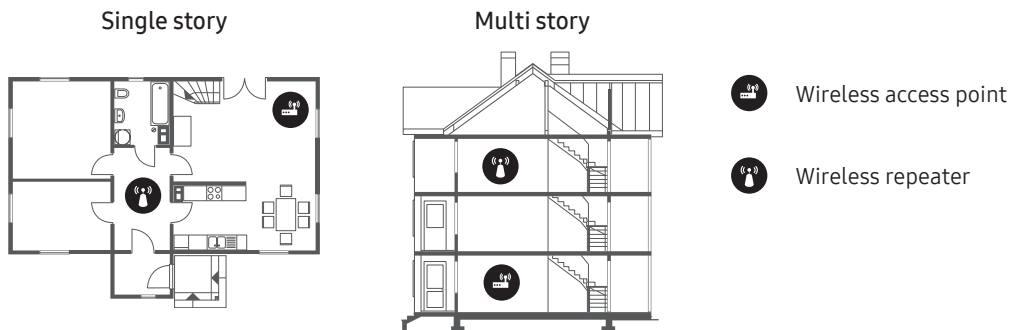

- Contact your Internet Service Provider (ISP) and ask them to reset your network circuit to re-register the MAC addresses of your modem or access point and the TV.

Video Apps problems (Youtube etc)

- Change the DNS to 8.8.8.8. Select (🏠) > ⚙️ Settings > General > Network > Network Status > IP Settings > DNS setting > Enter manually > DNS Server > enter 8.8.8.8 > OK.
- Reset by selecting (🏠) > ⚙️ Settings > Support > Device Care > Self Diagnosis > Reset Smart Hub.

What is Remote Support?

Samsung Remote Support service offers you one-on-one support with a Samsung Technician who can remotely:

 
- Diagnose your TV
- Adjust the TV settings for you
- Perform a factory reset on your TV
- Install recommended firmware updates

How does Remote Support work?

You can easily get Samsung Remote Support service for your TV:

1. Call the Samsung service centre and ask for remote support.
2. Open the menu on your TV, and go to the **Support** menu. (🏠) > ⚙️ Settings > Support)
3. Select **Remote Management**, then read and agree to the service agreements. When the PIN screen appears, provide the PIN number to the technician.
4. The technician will then access your TV.

Eco Sensor and screen brightness

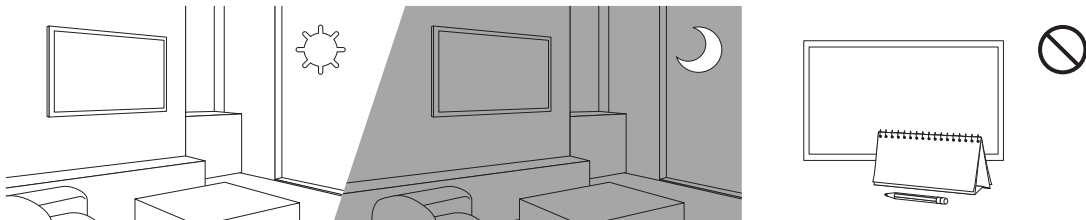


Eco Sensor adjusts the brightness of the TV automatically. This feature measures the light in your room and optimises the brightness of the TV automatically to reduce power consumption. If you want to turn this off, go to (🏠) > ⚙️ Settings > General > Eco Solution > Ambient Light Detection.

- If the screen is too dark while you are watching TV in a dark environment, it may be due to the **Ambient Light Detection** function.
- The eco sensor is located at the bottom of the TV. Do not block the sensor with any object. This can decrease picture brightness.

Caring for the TV

 - If a sticker was attached to the TV screen, some debris can remain after you remove the sticker. Please clean the debris off before watching TV.
- The exterior and screen of the TV can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.
- Do not spray water or any liquid directly onto the TV. Any liquid that goes into the product may cause a failure, fire, or electric shock.
- To clean the screen, turn off the TV, then gently wipe away smudges and fingerprints on the panel with a micro-fiber cloth. Clean the body or panel of the TV with a micro-fiber cloth dampened with a small amount of water. After that, remove the moisture with a dry cloth. While cleaning, do not apply strong force to the surface of the panel because it can damage the panel. Never use flammable liquids (benzene, thinner, etc.) or a cleaning agent. For stubborn smudges, spray a small amount of screen cleaner on a micro-fiber cloth, and then use the cloth to wipe away the smudges.

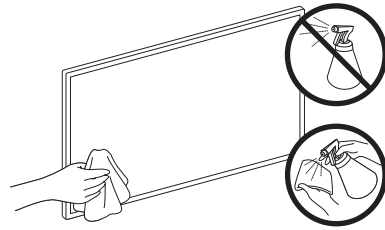

07 Specifications and Other Information

Specifications

Model Name	UA43TU8000J	UA50TU8000J
Display Resolution	3840 x 2160	3840 x 2160
Screen Size Measured Diagonally	43 inches	50 inches
Sound (Output)	20 W	20 W
Dimensions (W x H x D) Body With Stand	963.9 x 558.9 x 59.6 mm 963.9 x 627.8 x 192.5 mm	1116.8 x 644.2 x 59.9 mm 1116.8 x 719.1 x 250.2 mm
Weight Without Stand With Stand	8.1 kg 8.3 kg	11.4 kg 11.6 kg
Model Name	UA55TU8000J	UA65TU8000J
Display Resolution	3840 x 2160	3840 x 2160
Screen Size Measured Diagonally	55 inches	65 inches
Sound (Output)	20 W	20 W
Dimensions (W x H x D) Body With Stand	1230.5 x 707.2 x 59.9 mm 1230.5 x 783.3 x 250.2 mm	1449.4 x 830.3 x 59.9 mm 1449.4 x 906.6 x 282.1 mm
Weight Without Stand With Stand	13.9 kg 14.2 kg	20.6 kg 20.9 kg
Model Name	UA43TU8500J	UA50TU8500J
Display Resolution	3840 x 2160	3840 x 2160
Screen Size Measured Diagonally	43 inches	50 inches
Sound (Output)	20 W	20 W
Dimensions (W x H x D) Body With Stand	963.5 x 557.7 x 56.8 mm 963.5 x 645.2 x 334.3 mm	1116.4 x 642.9 x 57.1 mm 1116.4 x 728.1 x 326.5 mm
Weight Without Stand With Stand	9.0 kg 11.3 kg	12.9 kg 15.2 kg

Model Name	UA55TU8500J
Display Resolution	3840 x 2160
Screen Size Measured Diagonally	55 inches
Sound (Output)	20 W
Dimensions (W x H x D)	
Body	1230.1 x 705.9 x 57.4 mm
With Stand	1230.1 x 793.0 x 340.4 mm
Weight	
Without Stand	17.2 kg
With Stand	18.8 kg

Environmental Considerations

Operating Temperature	10°C to 40°C (50°F to 104°F)
Operating Humidity	10% to 80%, non-condensing
Storage Temperature	-20°C to 45°C (-4°F to 113°F)
Storage Humidity	5% to 95%, non-condensing

- The design and specifications are subject to change without prior notice.
- For information about the power supply, and more information about power consumption, refer to the label-rating attached to the product.
- You can see the label-rating attached to the back of the TV. (For some models, you can see the label-rating inside the cover terminal.)
- The screen size on the energy label and package may have the tolerance within ± 1 cm.

Decreasing power consumption

When you shut the TV off, it enters Standby mode. In Standby mode, it continues to draw a small amount of power. To decrease power consumption, unplug the power cord when you don't intend to use the TV for a long time.


Licences



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

閱讀這份使用者手冊前

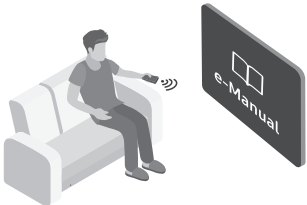


這款電視隨附使用者手冊和內嵌電子手冊。
閱讀這份使用者手冊前，請查看以下資料：

	使用者手冊	閱讀這份隨附的使用者手冊以查看有關產品安全、安裝、配件、初始設定和產品規格的資料。
	e-Manual	如需進一步瞭解這款電視，請參閱內嵌於產品的電子手冊。 <ul style="list-style-type: none">若要開啟 e-Manual， 🏠 > ⚙️ 設定 > 支援 > 開啟 e-Manual



在網站（www.samsung.com）上，您可以下載手冊並在您的 PC 或流動裝置上查看其內容。

瞭解電子手冊的輔助功能

- 部分功能表畫面無法從電子手冊存取。

	搜尋	在搜尋結果中選擇項目以載入對應頁面。
A-Z	索引	選擇關鍵字以瀏覽至相關頁面。 <ul style="list-style-type: none">此功能僅適用於英文電子說明書。
	網站地圖	這會顯示 e-Manual 中每個項目的清單。
	最近觀賞	從最近看過的主題列表中選擇一個主題。

瞭解電子手冊主題頁上的按鈕功能

	立即嘗試	讓您存取相應的功能表項目並即時嘗試使用該功能。
	連結	立即存取 e-Manual 頁上的相關主題。

警告！重要安全指示

在使用電視前，請先閱讀安全指示。
請參照下表中有關您的 Samsung 產品的符號解說。

注意			
觸電風險。請勿開啟。			II 類產品：此標誌指出無需安全連接地電。如果附帶電源線的產品上面找不到這個符號，該產品必須連接可靠的保護性接地線（接地）。
注意：為了減少電擊的危險，切勿卸下護蓋（或後蓋）。裝置內沒有使用者可維修的部件。請交由合格的技術人員進行所有維修工作。			AC 電壓：以此標誌標記的最高電壓為 AC 電壓。
	此符號表示內有高電壓。以任何方式與本產品內部之任何部件接觸均可導致危險。		DC 電壓：以此標誌標記的最高電壓為 DC 電壓。
	此符號表示本產品隨附關於操作與維護的重要說明文件。		注意。請參閱使用說明：此符號指示用戶查閱使用者手冊以取得進一步的安全相關資訊。

- 機殼與後蓋或底蓋上的槽口與開口均為提供必要的通風而設。為了確保本裝置之可靠操作以及避免過熱，切勿堵塞或遮蔽這些槽口與開口。
 - 切勿將本裝置放在空間狹窄封閉之處（例如書櫥或內嵌式壁櫥），除非具備足夠的通風設備。
 - 切勿將本裝置放在靠近暖氣設備或耐熱器物的地方，或者陽光直射的地方。
 - 切勿將包含水的器具（花瓶等）放在本裝置上面，因為如此可能會導致火災或電擊。
- 切勿將本裝置暴露在雨中或放在靠近水的地方（靠近浴缸、洗臉盆、廚房水槽，或洗衣槽、潮濕的地下室，或靠近游泳池等等）。如果意外濺濕本裝置，請即刻拔除電源插頭並聯絡授權的經銷商。
- 本裝置使用電池。您的社區可能基於環境上的考量，制訂有必須適當棄置電池的規定。請與當地主管機關聯絡以查詢有關棄置或回收的資訊。
- 切勿讓牆上插座、延長線或轉接器超載，因為如此將可能會導致火災或電擊。
- 對於電源線的佈線，應避免電源線可能被踩踏或被附近物體擠壓。特別留意插頭、轉接器以及電源線從裝置伸出之處。

- 為了保護本裝置免於受到閃電暴風雨襲擊，或長期不使用本裝置時提供保護，請從牆上插座拔下電源線，以及中斷與天線或纜線系統的連接。如此可預防在發生閃電或電源突斷時對裝置造成傷害。
- 在將 AC 電源線連接到 DC 變壓器之前，請先確認 DC 變壓器的電壓符合當地的電力供應。
- 切勿將任何金屬物插入本裝置的開口處，如此可能會有遭到電擊的危險。
- 為避免電擊，切勿碰觸裝置的內部。只有合格的技術人員可以打開本裝置。
- 插入電源線時務必牢牢插入到底。拔出電源線時，務必抓住電源插頭再從插座中拔出。請勿拉扯電源線以拔出插頭。切勿在手沾濕的情況下觸摸電源線。
- 如果此設備無法正常運作，尤其是如果出現任何異常聲音或氣味，請立即將插頭拔除並與授權的經銷商或 Samsung 服務中心聯絡。
- 如果電視一直沒在使用，或您打算離開屋子一段時間（尤其是將幼童、年者者或行動不便者獨留在屋內時），請確實將電源線插頭從插座拔除。
 - 累積的灰塵可能造成會電擊、漏電，或因電線走火造成火災，或者使絕緣體老化。
- 若要在灰塵多、高溫或低溫、高濕度、含化學物質的環境中，以及機場或火車站等全天候使用的地方安裝裝置，請務必聯絡授權的三星服務中心以取得相關資訊。否則，可能會導致您的裝置嚴重損壞。
- 請只使用適當接地的插頭和插座。
 - 接地不良可能造成觸電或裝置損壞。（僅限於 1 類設備）
- 如要完全關閉此設備，請拔除牆上插座。為確保您能夠快速拔除此設備（如有需要），請確保您易於接觸牆上插座和插頭。
- 請將附件（電池等）存放於兒童無法觸及的安全位置。
- 切勿摔落或撞擊本產品。如果產品損毀，請拔除電源線並聯絡三星服務中心。
- 先從電源插座拔下電源線，然後使用乾燥的軟布擦拭本產品。切勿使用任何化學製品，如蠟、苯、酒精、稀釋劑、殺蟲劑、空氣清新劑、潤滑劑或清潔劑。這些可能會損害產品外觀或擦掉產品上的印刷內容。
- 切勿讓裝置滴到或濺到水。
- 切勿讓電池接觸到火。
- 切勿使電池短路、過熱或拆解電池。
- **注意：**如果您將遙控器中所使用的電池更換為不正確的電池，可能會有爆炸的危險。請務必更換為相同或同等類型的電池。

本使用者手冊中的圖表和插圖僅供參考，可能與實際的產品外觀有所差別。產品設計與規格可能有所變更，恕不另行通知。

警告 - 為防止起火，請務必使此產品遠離蠟燭或其他明火。




目錄

閱讀這份使用者手冊前	2
警告！重要安全指示	3
01 盒中內容物	
02 電視安裝	
將電視安裝於牆上	7
為電視提供適當的通風	8
安全注意事項：將電視固定在牆上， 以免電視機掉落	9
03 三星智能遙控 (Samsung Smart Remote)	
有關三星智能遙控 (Samsung Smart Remote) 上的按鈕	10
將電視與三星智能遙控 (Samsung Smart Remote) 配對	11
在三星智能遙控 (Samsung Smart Remote) 中安裝電池	11
04 執行初始設定	
天線轉接器連接方法	12
使用電視控制器	13
05 連線至網絡	
網絡連線 - 無線	14
網絡連線 - 有線	14
06 解決疑難與維護	
解決疑難	15
什麼是遠端支援？	17
Eco 感應器和螢幕亮度	17
電視保養	18
07 規格與其他資訊	
規格	19
環境因素	20
降低耗電量	21
授權	21

01 盒中內容物

請確定您的電視隨附下列物品。如有任何缺件，請聯絡您的經銷商。

 - 三星智能遙控 (Samsung Smart Remote)和電池 (AA x 2 顆)
- 保固卡 / 法規指南 (部分地區不適用)
- 使用者手冊
- 電視電源線

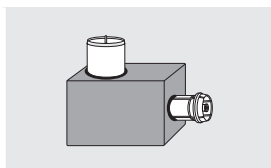

天線隔離器

- 物品的顏色和形狀可能因型號而異。
- 連接線須獨立購買。
- 開啟包裝盒時，檢查隱藏在背後或放在包裝物料中的配件。

△ 備註：安全插入電源線，以免電源線從電視鬆脫。

以下情況可能酌收服務費：

(a) 在您的要求下派出工程師查看，但是產品沒有找到瑕疵（例如未閱讀使用者手冊）。

(b) 您將裝置帶到 Samsung 服務中心，但是產品沒有找到瑕疵（例如未閱讀使用者手冊）。

服務技師到場服務之前會先告知您所需收取的服務費用。



警告：處理不當時螢幕可能因直接施壓而受損。搬動電視時建議您抬舉電視邊緣，如圖所示。如需有關處理方式的詳細資訊，請參閱隨此產品提供的 Quick Setup Guide。



 
02 電視安裝

將電視安裝於牆上




若要將此產品安裝在牆上，請完全遵照製造商建議的方式安裝。若未以正確的方式安裝，則產品可能會滑動或墜落，因而造成兒童或成人受到嚴重傷害，以及使產品受到嚴重的損毀。

- 請參閱 Samsung 壁掛架組隨附的安裝手冊。
- 您必須使用壁掛架組（單獨販售）將電視安裝在牆上。

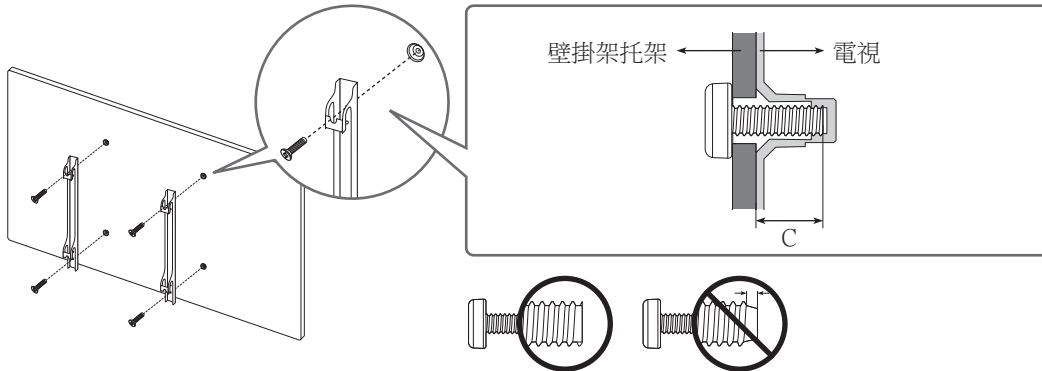

- 若您選擇自行安裝壁掛架，對於因此造成的任何產品損壞或人身傷害，Samsung Electronics 概不負責。
- 您可以將壁掛架安裝在與地板垂直的實心牆壁上。在將壁掛架安裝於非水泥牆面之前，請先洽詢當地經銷商以取得更多相關資訊。若安裝在天花板或偏斜的牆面，可能會掉落並導致嚴重的人身傷害。
- 下頁圖表顯示壁掛托架套件的標準尺寸。
- 如果您安裝第三方壁掛架，請參閱下一頁表格的 C 欄，以瞭解在壁掛架上安裝電視機的螺絲長度。
- 安裝壁掛架組件時，建議您緊固所有四顆 VESA 螺絲。
- 如果您只使用上方兩顆螺絲將壁掛架組件安裝在牆上，請確保使用支援該安裝類型的 Samsung 壁掛架組件。（您可能無法購買這類型的壁掛架組件，視乎地理區域而定。）

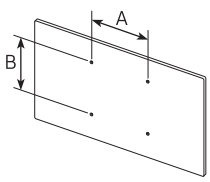電視機尺寸 (以英寸為單位)	VESA 螺絲孔規格 (A * B) (單位：毫米)	C (毫米)	標準 螺絲	數量	
43-55	200 x 200	20-22 *39-41	M8	4	
65	400 x 300				

*：這些規格受TU8500型號支援。





切勿在電視開啟時安裝壁掛架組。否則可能會因觸電而導致人身傷害。

- 請勿使用比標準長度長，或與 VESA 標準螺絲規格不相容的螺絲。太長的螺絲可能導致電視機內部損壞。
- 對於不符 VESA 標準螺絲規格的壁掛架，螺絲長度可能根據壁掛架規格而有所不同。
- 請勿將螺絲鎖得太緊。這樣可能會損壞產品或造成產品掉落，導致人身傷害。Samsung 對於這類意外不負任何責任。
- 若使用非 VESA 或非指定壁掛架，或因消費者未遵守產品安裝指示而造成產品損毀或人身傷害，Samsung 不負任何責任。
- 電視安裝傾斜角度勿超過 15 度。
- 將電視機安裝於牆上時，務必由兩人合作進行。

為電視提供適當的通風

當您安裝電視機時，電視機與其他物品（牆壁、櫥櫃等等）間務必保持至少 10 公分的距離，以確保通風正常。如果未能保持正常的通風，則可能由於電視內部溫度過高而起火或發生其他問題。

- 當您使用支架或壁掛架安裝電視時，強烈建議您僅使用 Samsung Electronics 所提供的零件。若使用其他製造商提供的零件，可能導致產品使用困難，或因產品掉落而造成傷害。

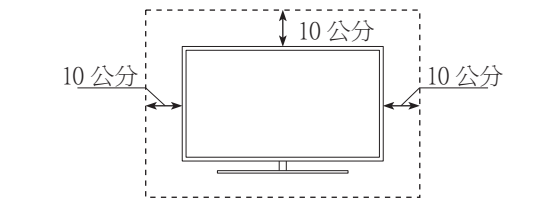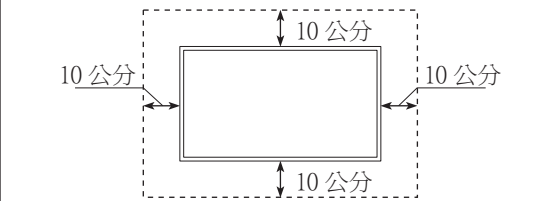裝上底座	以壁掛架安裝
	

其他警告

- 依型號而定，電視的實際外觀可能與此手冊中的圖解不同。
- 碰觸電視時請務必小心，因為部分零件可能具有高溫。

安全注意事項：將電視固定在牆上，以免電視機掉落



注意：拉、推或攀爬電視可能會導致電視墜落。尤其應禁止兒童攀爬或搖晃電視，此動作可能造成電視翻倒，導致嚴重傷害或死亡。請遵守電視隨附之安全傳單中的所有安全注意事項。若要增強穩定性，您可以購買並安裝如下所述的防墜裝置。



警告：切勿將電視機放在不穩固的地方。否則電視機可能掉落，甚至導致人身嚴重受傷或死亡。只要採取簡單的預防措施即可避免許多傷害，尤其是對於小孩子，例如：

 
 
- 一律使用電視機製造商建議的櫥櫃或底座或安裝方法。
- 一律使用可安全支撐電視機的家具。
- 一律確保電視機不會超出支撐家具的邊緣而懸空。
- 一律教導孩子攀爬到家具上使用或控制電視機的危險。
- 一律定好連接到電視的電線和電纜線路，如此才不會發生絆倒、拉扯或抓住等情況。
- 切勿將電視機放在不穩固的地方。
- 絕不將電視機放在較高的家具（例如櫥櫃或書架），而沒有使用適當的支撐物支撐或固定家具和電視機。
- 絕不將電視機放在上有布料或其他材料的家具上。
- 絕不將可能誘導兒童攀爬的物品（例如玩具和遙控器）放置在電視機或擺設電視的家具上。

如果現有的電視機打算保留並搬動位置，則應適用以上相同措施。

- 當您為了更換或清潔而必須重新放置或抬起電視時，切勿拉出底座。

避免電視掉落

1. 使用合適的螺絲，將一組支架固定在牆上。確認螺絲已牢固地鎖到牆上。
 - 根據牆壁類型，您可能需要其他材料，如固定件。
2. 使用尺寸合適的螺絲，將一組支架固定在電視機上。
 - 如需螺絲的規格，請參閱「將電視安裝於牆上」下表格中的標準螺絲部分。
3. 接上固定到電視上的支架，然後使用耐久、耐重的纜繩將支架固定到牆上，再拉緊纜繩。
 - 將電視安裝至靠近牆面的位置，以防向後方墜落。
 - 接上纜繩使固定在牆面上的支架位在與固定在電視上的支架相同或更低的高度。

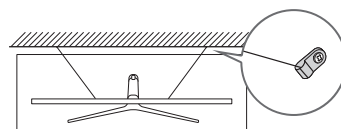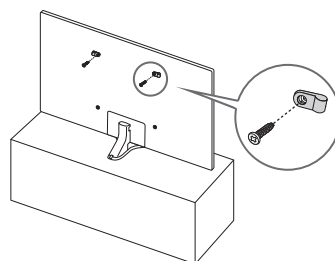


- 產品的顏色和形狀可能依型號而異。


03 三星智能遙控 (Samsung Smart Remote)



 有關三星智能遙控 (Samsung Smart Remote)上的按鈕

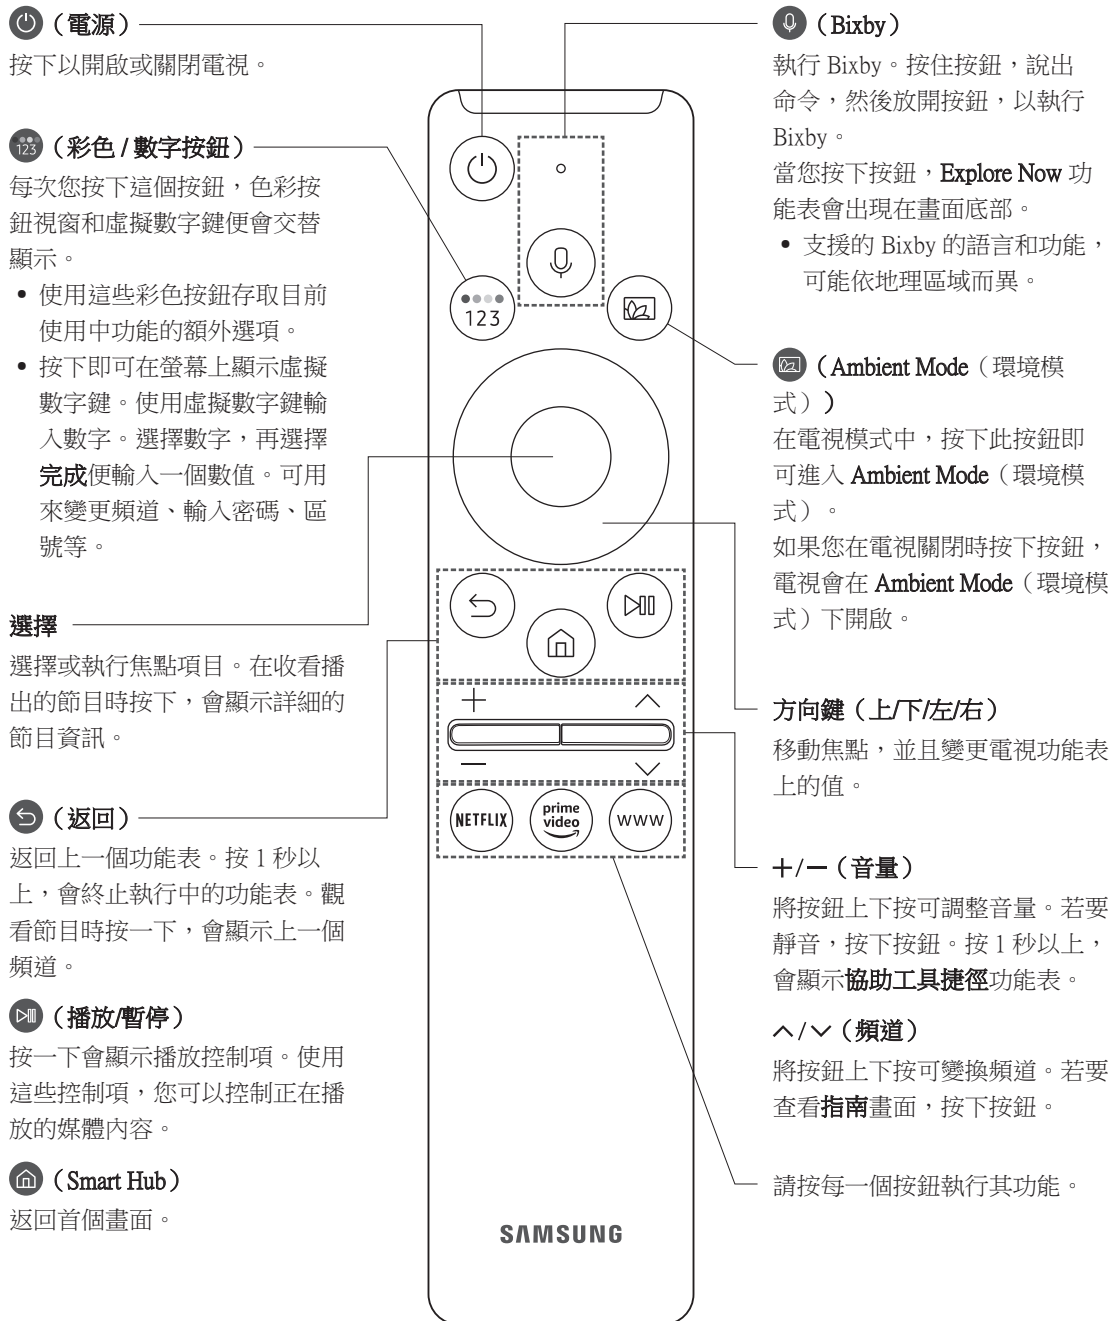 - 三星智能遙控 (Samsung Smart Remote)上的的圖像、按鈕和功能可能依型號而異。
- 通用遙控器設定功能只有在使用電視隨附的三星智能遙控 (Samsung Smart Remote)時才會正常運作。

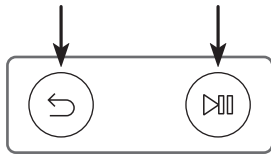


將電視與三星智能遙控 (Samsung Smart Remote)配對



第一次開啟電視時，三星智能遙控 (Samsung Smart Remote)會自動與電視配對。如果三星智能遙控 (Samsung Smart Remote)沒有自動與電視配對，請將其指向電視的遙控器感應器，然後同時按住左圖中標示  和  的按鈕 3 秒或以上。

- 三星智能遙控 (Samsung Smart Remote)一次只能配對一部電視。

 在三星智能遙控 (Samsung Smart Remote)中安裝電池

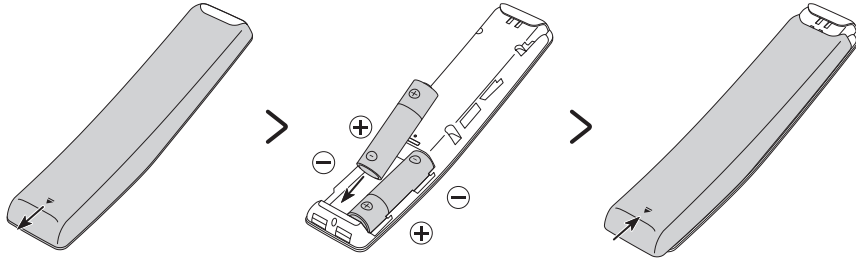



若要安裝電池，請依照底部的箭頭方向推動背後的蓋子將其打開，然後按照圖示放入電池。確定正負極的方向正確。如圖所示蓋上後蓋。

- 建議使用壽命較長的鹼性電池。

04 執行初始設定

第一次開啟電視時，電視會立即開始初始設定。初始設定讓您為電視操作配置基本設定，例如廣播接收、頻道搜尋和網絡連線。

- 開始初始設定前，確定先連接至外部裝置。
- 如要使用電視的智能功能，電視必須連線至互聯網
- 若要使用 SmartThings 應用程式執行初始設定，您必須透過 Wi-Fi 連接流動裝置。
- 如果用於設定的彈出式視窗未自動出現在行動裝置上的 SmartThings 應用程式，請在使用 SmartThings 應用程式的儀表板上的**新增裝置**加上電視後，繼續以手動方式設定。
- SmartThings 應用程式適用於執行 Android 6.0 或以上版本或 iOS 10 或以上版本的行動裝置。
- 電視與流動裝置通訊時可能暫時發生雜訊。

您也可以透過電視功能表開始初始設定（ >  **設定** > **一般** > **重設**）。

 
遵循初始設定螢幕上的指示配置電視的基本設定，以切合您的觀賞環境。

天線轉接器連接方法

將提供的天線轉接器連接到牆上的天線端子，然後將接到電視 ANT IN 的天線纜線連接到天線轉接器。

連接天線轉接器可防止因為牆上天線端子和天線纜線間的潛在差異所產生的過載，進而預防產品損壞或者發生火災。

- 務必使用所提供的天線轉接器。
- 連接天線轉接器的方式和天線端子上的標記可能依型號和地理區域而有所不同。
- 如果使用天線轉接器而天線訊號弱，畫面可能會變得模糊不清。

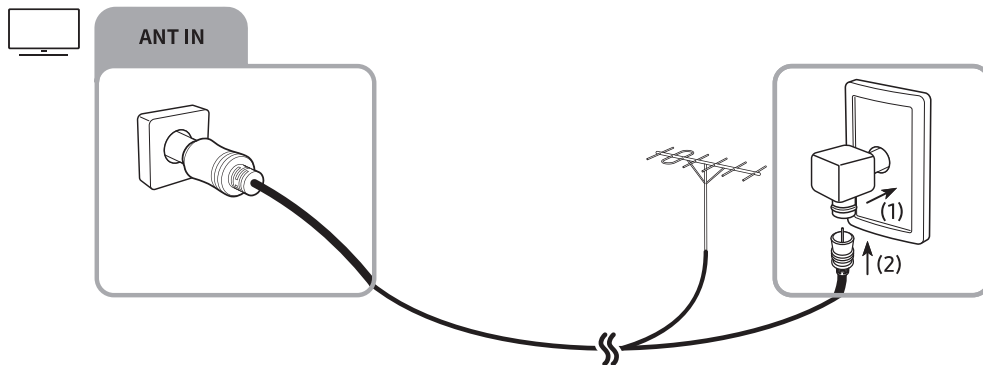


- 您電視上的圖像與上方圖像可能有所不同，依型號和地理區域而定。

使用電視控制器

您可以使用電視底部的**電視控制器**按鈕開啟電視，然後使用**控制功能表**。在電視開啟狀態下按**電視控制器**按鈕後，就會顯示**控制功能表**。如需有關其使用方式的資訊，請參閱下圖。

 - 如果 SAMSUNG 標誌或電視底部的保護膜未拆除，螢幕可能會變暗。請拆除保護膜。

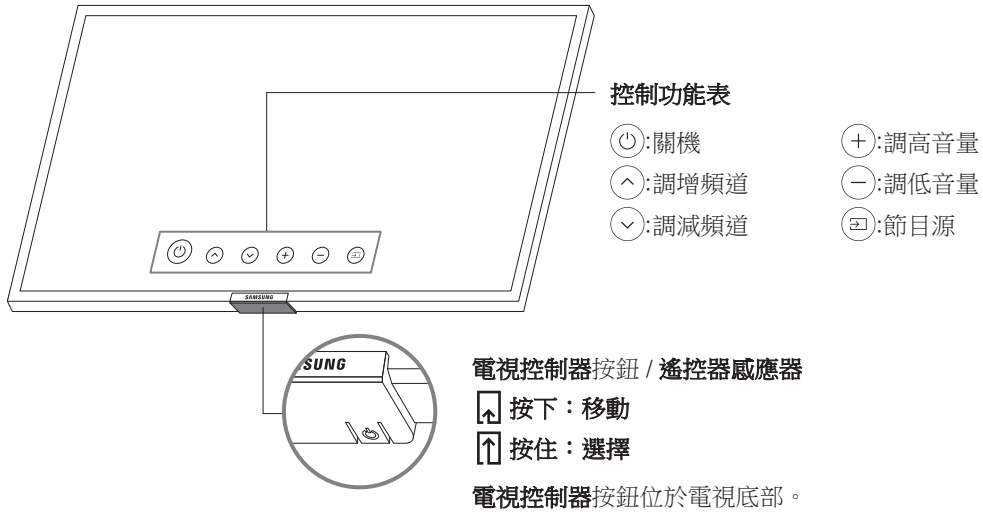

05 連線至網絡

 
將電視連線到網絡可讓您存取 Smart Hub 等線上服務以及軟體更新。

網絡連線 - 無線

使用無線存取點或數據機將電視連線到互聯網。



網絡連線 - 有線





使用區域網絡線將電視連接至網絡。

- 如果網絡速度低於 10 Mbps，電視將無法連接到互聯網。
- 使用 Cat7 (*STP 型) 纜線進行連接。
* 屏蔽雙絞線

06 解決疑難與維護

解決疑難


 
 



若電視發生問題，請先檢閱此可能的問題與解決方案清單。也可檢閱 e-Manual 中的「解決疑難」或「常見問題」一節。若沒有適用的解決疑難提示，請前往「www.samsung.com」並按「支援」或聯絡此手冊封底列出的 Samsung 服務中心。

- 此 TFT LED 面板是由子像素組成，需要使用精密技術製造。但是，螢幕上可能出現少數明亮像素或暗色像素。這些像素不會影響產品的效能。
- 為了使電視保持在最佳狀態，請升級至最新的軟體。使用電視功能表上的**立即更新**或**自動更新**功能（ >  **設定** > **支援** > **軟件更新** > **立即更新**或**自動更新**）。

電視不會開啟。

- 確認 AC 電源線正確連接電視和牆上插座。
- 確定牆上插座可用，電視底部的遙控器感應器是否亮起且為紅燈。
- 嘗試按電視底部的**電視控制器**按鈕，確認不是遙控器的問題。若電視已開啟，請參閱「遙控器沒有作用」。

沒有外部裝置的圖像/視頻/音效，或圖像/視頻/音效失真，或電視上顯示「訊號弱或沒有訊號」，或找不到頻道。

- 確認與裝置的連接正確並且所有纜線有完全插入。
- 拔除並重新連接電視與外部裝置間的所有纜線。可以的話，試試新纜線。
- 確認已選擇正確的輸入訊號來源（ >  **節目源**）。
- 執行電視自我診斷以判斷問題是否為電視或裝置（ >  **設定** > **支援** > **裝置維護** > **自我診斷** > **圖像測試**或**聲音測試**）所造成。
- 如果測試結果為正常，透過拔除每個裝置的電源線然後再次插入來重新啟動連接的裝置。如果問題仍然存在，請參閱所連接裝置的使用者手冊中的連接指南。
- 若您沒有使用有線盒或衛星機頂盒，而您的電視透過天線或牆上有線接收電視訊號，請執行**自動調頻**以搜尋頻道（ >  **設定** > **廣播** >（**自動調頻設定**）> **自動調頻**）。
 - **自動調頻設定**僅適用於特定型號或區域。
 - 若您有使用有線或衛星電視盒，請參閱有線或衛星電視盒的手冊。

 

遙控器沒有作用。

- 檢查電視底部的電源指示燈有否在您按下遙控器的電源按鈕時閃爍。如果沒有，請更換遙控器的電池。
- 務必以正確的電極（+/-）方向安裝電池。
- 嘗試從 1.5-1.8 公尺的距離將遙控器直接指向電視。
- 如果電視隨附三星智能遙控 (Samsung Smart Remote)（藍牙遙控器），請確認將遙控器與電視配對。


 
有線盒或機頂盒遙控器無法開關電視或調整音量。


- 設定有線盒或機頂盒遙控器，以操作電視。請參閱有線盒或機頂盒使用者手冊，以取得 SAMSUNG TV 的代碼。

電視設定在 5 分鐘後遺失。

 - 電視在零售模式中，在一般功能表中將使用模式更改為家用模式（ >  設定 > 一般 > 系統管理員 > 使用模式 > 家用模式）。




 
Wi-Fi 訊號斷斷續續

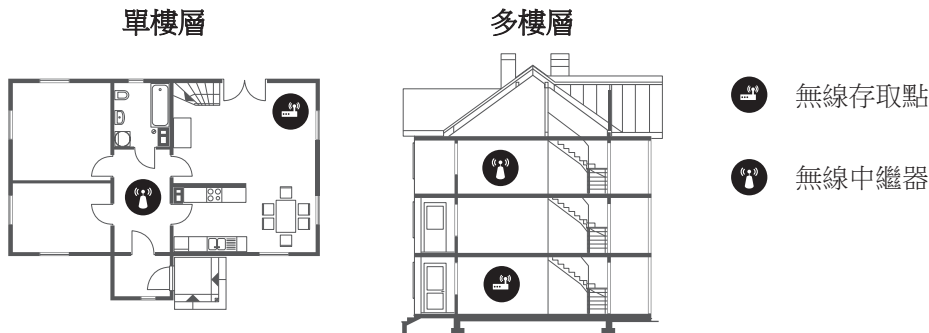- 確認電視有連接網絡（ >  設定 > 一般 > 網絡 > 網絡狀態）。
- 確認 Wi-Fi 密碼輸入正確。
- 請檢查電視與數據機或存取點間的距離。該距離不應超過 15.2 公尺。
- 不使用或關閉無線裝置可減少干擾。並且，確認電視與數據機或存取點之間沒有任何障礙物。（Wi-Fi 訊號強度可能因為設備、無線電話、石牆/壁爐等而減弱）



- 聯絡您的 Internet 服務供應商（ISP）並要求他們重設您的網絡迴路，以重新註冊數據機或存取點與電視的 MAC 位址。

視頻應用程式問題（Youtube 等）

- 將 DNS 變更為 8.8.8.8。選擇  >  設定 > 一般 > 網絡 > 網絡狀態 > IP 設定 > DNS 設定 > 手動輸入 > DNS 伺服器 > 輸入 8.8.8.8 > 確定。
- 選取  >  設定 > 支援 > 裝置維護 > 自我診斷 > 重設 Smart Hub 以進行重設。


 
什麼是遠端支援？

Samsung 遠端支援服務可透過 Samsung 服務技師以遠端方式提供一對一支援：

 
- 診斷您的電視
- 為您調整電視設定
- 在您的電視執行出廠重設
- 安裝建議的韌體更新

遠端支援的運作方式

您可以輕易為您的電視取得 Remote Support 遠端支援服務：

1. 聯絡 Samsung 服務中心並要求提供遠端支援。
2. 在電視上開啟功能表，然後移至支援功能表。（ >  設定 > 支援）
3. 選擇**遠端管理**，然後閱讀並同意服務合約。當出現 PIN 畫面時，向技術人員提供 PIN 碼。
4. 然後技術人員將存取您的電視。

Eco 感應器和螢幕亮度

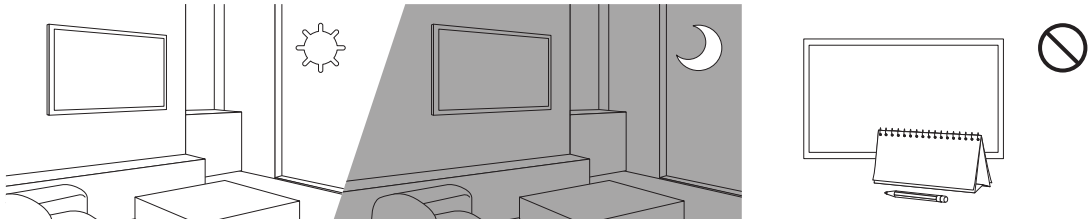


Eco 感應器會自動調整電視的亮度。此功能會測量室內的光線並自動將電視的亮度最佳化，以減少耗電。如果您要將其關閉，請移至  >  設定 > 一般 > Eco 解決方案 > 環境光源偵測。

- 如果在較暗的環境下觀看電視時發現螢幕太暗，可能是**環境光源偵測**功能所造成。
- Eco 感應器位在電視底部。請勿讓任何物體擋住感應器，如此可能會降低畫面的亮度。

電視保養

 - 如果電視螢幕上黏有貼紙，在撕下貼紙後仍會有殘膠。觀賞電視前請先清理殘膠。
- 電視的外部 and 螢幕可能會在清潔時遭到刮傷。請小心使用軟布擦拭外部 and 螢幕，以防刮傷。
- 請勿直接在電視上噴灑水或任何液體。任何滲入產品中的液體都可能導致故障、火災或電擊。
- 如要清潔螢幕，請關閉電視，然後以超細纖維布料輕輕拭去螢幕上的污跡和指紋。請以略微沾濕的超細纖維布清潔電視機身或面板。然後使用乾布拭去水氣。清潔時請勿在螢幕表面施加壓力，因為可能造成螢幕受損。切勿使用可燃液體（苯、稀釋劑等）或清潔劑。如要去除頑固污跡，可在超細纖維布料上噴少許螢幕清潔劑，然後拭去污跡。

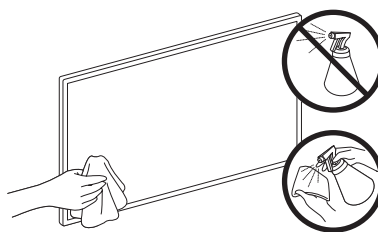

07 規格與其他資訊

規格

型號名稱	UA43TU8000J	UA50TU8000J
顯示解像度	3840 x 2160	3840 x 2160
畫面大小 對角線測量	43 英吋	50 英吋
音效 (輸出)	20 W	20 W
尺寸 (寬 x 高 x 深)		
不帶底座	963.9 x 558.9 x 59.6 毫米	1116.8 x 644.2 x 59.9 毫米
帶底座	963.9 x 627.8 x 192.5 毫米	1116.8 x 719.1 x 250.2 毫米
重量		
不帶底座	8.1 千克	11.4 千克
帶底座	8.3 千克	11.6 千克
型號名稱	UA55TU8000J	UA65TU8000J
顯示解像度	3840 x 2160	3840 x 2160
畫面大小 對角線測量	55 英吋	65 英吋
音效 (輸出)	20 W	20 W
尺寸 (寬 x 高 x 深)		
不帶底座	1230.5 x 707.2 x 59.9 毫米	1449.4 x 830.3 x 59.9 毫米
帶底座	1230.5 x 783.3 x 250.2 毫米	1449.4 x 906.6 x 282.1 毫米
重量		
不帶底座	13.9 千克	20.6 千克
帶底座	14.2 千克	20.9 千克
型號名稱	UA43TU8500J	UA50TU8500J
顯示解像度	3840 x 2160	3840 x 2160
畫面大小 對角線測量	43 英吋	50 英吋
音效 (輸出)	20 W	20 W
尺寸 (寬 x 高 x 深)		
不帶底座	963.5 x 557.7 x 56.8 毫米	1116.4 x 642.9 x 57.1 毫米
帶底座	963.5 x 645.2 x 334.3 毫米	1116.4 x 728.1 x 326.5 毫米
重量		
不帶底座	9.0 千克	12.9 千克
帶底座	11.3 千克	15.2 千克

型號名稱	UA55TU8500J
顯示解像度	3840 x 2160
畫面大小 對角線測量	55 英吋
音效 (輸出)	20 W
尺寸 (寬 x 高 x 深)	
不帶底座	1230.1 x 705.9 x 57.4 毫米
帶底座	1230.1 x 793.0 x 340.4 毫米
重量	
不帶底座	17.2 千克
帶底座	18.8 千克

環境因素

工作溫度	10°C 至 40°C (50°F 至 104°F)
工作濕度	10% 至 80%，無冷凝
存放溫度	-20°C 至 45°C (-4°F 至 113°F)
存放濕度	5% 至 95%，無冷凝

- 設計與規格可能隨時變更，恕不提前通知。
- 有關電源供應和耗電量的其他資訊，請參閱產品隨附的標籤額定值。
- 您可以看到電視背面的標籤。（對於部分型號，您可以查看端子護蓋內側的標籤。）
- 能源標籤和包裝上的螢幕大小可能有 ±1 公分以內的公差。

降低耗電量

將電視關機後，會進入待機模式。在待機模式中，仍會使用少量電源。為了減少耗電量，請在長時間不使用電視時將電源線拔掉。

授權



HDMI 及 HDMI High-Definition Multimedia Interface 這兩個用詞，以及 HDMI 標誌皆為 HDMI Licensing LLC 在美國和其他國家/地區的商標或註冊商標。


本頁留白。

本頁留白。

SAMSUNG

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the Samsung service centre.

Country/Area	Samsung Service Centre 	Web Site
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
MACAU	0800 333 1800 7267864 1800-SAMSUNG	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)

